





## **Cisco Unified IP Phone 7906G and 7911G Phone Guide for Cisco Unified Communications Manager 8.0 (SCCP and SIP)**

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883



## Common Phone Tasks

Place a call	Go off-hook before or after dialing a number.
Redial a number	Press <b>Redial</b> .
Talk using the handset and listen on the speaker	(Group Listen mode only.) Press <b>GListen</b> .
Listen on the speaker only	(Monitor mode only.) Press <b>Monitor</b> .
Use your call logs	Press  and select <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b> . Select a number and press <b>Dial</b> .
Edit a number	Press <b>EditDial</b> , << or >>.
Hold/resume a call	Highlight a call to put on hold or resume from hold, and press  .
Transfer a call to a new number	Press <b>Transfer</b> , enter the number, then press <b>Transfer</b> again.
Start a standard (ad hoc) conference call	Press <b>more &gt; Confrn</b> and dial the participant, then press <b>Confrn</b> again.



Cisco, Cisco Systems, the Cisco logo, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries. All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)



### QUICK REFERENCE



## Cisco Unified IP Phone 7906G and 7911G Phone Guide for Cisco Unified Communications Manager 8.0

Common Phone Tasks  
Softkey Definitions  
Phone Screen Icons  
Button Icons










## Softkey Definitions

<b>AbbrDial</b>	Dial using a speed-dial index number
<b>Answer</b>	Answer a call
<b>Barge</b>	Add yourself to a call on a shared line
<b>CallBack</b>	Receive notification when a busy extension becomes available
<b>Cancel</b>	Cancel an action or exit a screen without applying changes
<b>cBarge</b>	Add yourself to a call on a shared line and establish a conference
<b>CFwdALL</b>	Setup/cancel call forwarding
<b>Clear</b>	Delete records or settings
<b>Close</b>	Close the current window
<b>ConfList</b>	View conference participants
<b>Confrn</b>	Create a conference call
<b>Delete</b>	Remove characters to the right of the cursor when using <b>EditDial</b>
<b>Dial</b>	Dial a phone number
<b>DND</b>	Turn on/off Do Not Disturb (DND)
<b>EditDial</b>	Edit a number in a call log
<b>EndCall</b>	Disconnect the current call
<b>Erase</b>	Reset settings to their defaults
<b>Exit</b>	Return to the previous screen
<b>GListen</b>	Talk using the handset and listen on the speaker (Group Listen)
<b>GLOff</b>	Disable Group Listen
<b>GPickUp</b>	Answer a call that is ringing in another group or on another line






<b>iDivert</b>	Send or redirect a call to a voice message system
<b>MeetMe</b>	Host a Meet-Me conference call
<b>Monitor</b>	Listen to a call on the speaker
<b>MonOff</b>	Disable the Monitor function
<b>more</b>	Display additional softkeys
<b>Msgs</b>	Access voice mail system
<b>New Call</b>	Make a new call
<b>OPickUp</b>	Answer a call that is ringing in an associated group
<b>Park</b>	Store a call using Call Park
<b>PickUp</b>	Answer a call that is ringing on another phone in your group
<b>QRT</b>	Submit call problems to the system administrator
<b>Redial</b>	Redial the most recently dialed number
<b>Remove</b>	Remove a conference participant
<b>RMLstC</b>	Drop the last party added to a conference call
<b>Search</b>	Search for a directory listing
<b>Transfer</b>	Transfer a call
<b>Update</b>	Refresh content
<b>VidMode (SCCP only)</b>	Choose a video display mode
<b>&lt;&lt;</b>	Delete entered characters
<b>&gt;&gt;</b>	Move through entered characters

## Phone Screen Icons


### Line and Call Status



	Call Forwarding enabled
	Call on hold; remote call on hold
	Connected call
	Off-hook
	On-hook
	Incoming call
	Shared line in use
	Authenticated call
	Encrypted call

### Other Features



 
 
	Speed Dial configured
	Message waiting
	Option selected
	Feature enabled
	URL entry in call log is ready to edit (SIP only)

### Audio or Video Mode

	Handset in use
---	----------------

	Speaker in use (Monitor on)
	Video enabled (Cisco Unified IP Phone 7911G only with SCCP)

## Button Icons

	Volume
	Navigation
	Hold
	Applications Menu

# Contents

---

## **Getting Started 1**

Using this Guide 1

Finding Additional Information 2

Accessing Cisco Unified IP Phone 7900 Series eLearning Tutorials 2

Safety and Performance Information 2

Cisco Product Security Overview 3

Accessibility Features 3

## **Connecting Your Phone 5**

### **An Overview of Your Phone 9**

Understanding Buttons and Hardware 9

Understanding Lines vs. Calls 11

    Understanding Line and Call Icons 11

Accessing Applications Menus 12

Accessing the Help System on Your Phone 12

Understanding Feature Availability 12

Understanding SIP vs. SCCP 13

### **Basic Call Handling 14**

Placing a Call—Basic Options 14

Placing a Call—Additional Options 15

Answering a Call 17

Ending a Call 18

Using Hold and Resume 18

Switching Between Multiple Calls 19

Switching an In-Progress Call to Another Phone 19

Viewing Multiple Calls 20

Transferring Calls 20

Sending a Call to a Voice Message System 21

Forwarding Calls to Another Number	22
Using Do Not Disturb	23
Making Conference Calls	24
Using Conference Features	24
Using Conference	25
Using Join	25
Using cBarge	26
Using Meet-Me	26
Viewing or Removing Conference Participants	27

## **Advanced Call Handling 28**

Speed Dialing	28
Picking Up a Redirected Call on Your Phone	30
Storing and Retrieving Parked Calls	31
Logging Out of Hunt Groups	32
Using a Shared Line	32
Understanding Shared Lines	32
Using Barge to Add Yourself to a Shared-Line Call	33
Understanding Barge Features	33
Using Barge Features	33
Preventing Others from Viewing or Barging a Shared-Line Call	34
Making and Receiving Secure Calls	34
Tracing Suspicious Calls	36
Prioritizing Critical Calls	36
Using Cisco Extension Mobility	37
Managing Business Calls Using a Single Phone Number	39

## **Using a Handset, Headset, and Speaker 42**

Using the Group Listen Feature	42
Using the Monitor Feature	43
Using a Headset	44
Using AutoAnswer	44

## **Changing Phone Settings 45**

Customizing Rings and Message Indicators 45

Customizing the Phone Screen 46

## **Using Call Logs and Directories 47**

Using Call Logs 47

Directory Dialing 49

Using Corporate Directory on Your Phone 49

Using Personal Directory on Your Phone 50

## **Accessing Voice Messages 53**

## **Using the Cisco Unified CM User Options Web Pages 54**

Accessing Your User Options Web Pages 54

Configuring Features and Services on the Web 55

Using Personal Directory on the Web 55

Using Your Personal Address Book on the Web 55

Configuring Fast Dials on the Web 56

Using the Address Book Synchronization Tool 57

Setting Up Speed Dials on the Web 58

Setting Up Phone Services on the Web 59

Controlling User Settings on the Web 60

Controlling Line Settings on the Web 60

Setting Up Phones and Access Lists for Mobile Connect 62

Using Cisco WebDialer 64

## **Understanding Additional Configuration Options 66**

## **Troubleshooting Your Phone 68**

General Troubleshooting 68

Viewing Phone Administration Data 69

Using the Quality Reporting Tool 69

## **Cisco One-Year Limited Hardware Warranty Terms 70**

## **Index 71**





# Getting Started

---

## Using this Guide

This guide provides you with an overview of the features available on your phone. You can read it completely for a solid understanding of your phone's capabilities, or refer to the table below for pointers to commonly-used sections.

<b>If you want to...</b>	<b>Then...</b>
Review safety information	See <a href="#">Safety and Performance Information</a> , page 2.
Connect your phone	See <a href="#">Connecting Your Phone</a> , page 5.
Use your phone after it is installed	Start with <a href="#">An Overview of Your Phone</a> , page 9.
Learn about the phone buttons	See <a href="#">Understanding Buttons and Hardware</a> , page 9.
Make calls	See <a href="#">Placing a Call—Basic Options</a> , page 14.
Put calls on hold	See <a href="#">Using Hold and Resume</a> , page 18.
Transfer calls	See <a href="#">Transferring Calls</a> , page 20.
Make conference calls	See <a href="#">Making Conference Calls</a> , page 24.
Set up speed dialing	See <a href="#">Speed Dialing</a> , page 28.
Share a phone number	See <a href="#">Using a Shared Line</a> , page 32.
Use the speaker on the phone	See <a href="#">Using a Handset, Headset, and Speaker</a> , page 42.
Change the ring volume or tone	See <a href="#">Changing Phone Settings</a> , page 45.
View your missed calls	See <a href="#">Using Call Logs and Directories</a> , page 47.
Listen to your voice messages	See <a href="#">Accessing Voice Messages</a> , page 53.
See softkey and icon definitions	Refer to the Quick Reference Card in the front of this guide.

## Finding Additional Information

- You can access the most current Cisco documentation on the World Wide Web at this URL:  
[http://www.cisco.com/en/US/products/hw/phones/ps379/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/hw/phones/ps379/tsd_products_support_series_home.html)
- You can access the Cisco website at this URL:  
<http://www.cisco.com/>
- You can access the most current licensing information at this URL:  
[http://www.cisco.com/en/US/docs/voice\\_ip\\_comm/cuipph/all\\_models/openssl\\_license/7900\\_sslic.html](http://www.cisco.com/en/US/docs/voice_ip_comm/cuipph/all_models/openssl_license/7900_sslic.html)
- Cisco international websites:  
Allows access to international Cisco websites from [www.cisco.com](http://www.cisco.com) by clicking on the Worldwide [change] link at the top of the web page.

## Accessing Cisco Unified IP Phone 7900 Series eLearning Tutorials

(SCCP phones only.)

The Cisco Unified IP Phone 7900 Series eLearning tutorials use audio and animation to demonstrate basic calling features. You can access eLearning tutorials online (for several phone models) from your personal computer. Look for the eLearning tutorial (English only) for your phone model in the documentation list at the following location:

[http://www.cisco.com/en/US/products/hw/phones/ps379/products\\_user\\_guide\\_list.html](http://www.cisco.com/en/US/products/hw/phones/ps379/products_user_guide_list.html)



---

**Note** Although eLearning tutorials for the Cisco Unified IP Phone 7906G and 7911G do not exist, refer to the Cisco Unified IP Phone 7900 Series eLearning tutorials for an overview of the common IP phone features and functionality.

---

## Safety and Performance Information

Refer to these sections for information about the impact of power outages and other devices on your Cisco Unified IP Phone.

### Power Outage

Your accessibility to emergency service through the phone is dependent on the phone being powered. If there is an interruption in the power supply, Service and Emergency Calling Service dialing will not function until power is restored. In the case of a power failure or disruption, you may need to reset or reconfigure equipment before using the Service or Emergency Calling Service dialing.

## Using External Devices

The following information applies when you use external devices with the Cisco Unified IP Phone:

Cisco recommends the use of good quality external devices (headsets) that are shielded against unwanted radio frequency (RF) and audio frequency (AF) signals.

Depending on the quality of these devices and their proximity to other devices such as mobile phones or two-way radios, some audio noise may still occur. In these cases, Cisco recommends that you take one or more of the following actions:

- Move the external device away from the source of the RF or AF signals.
- Route the external device cables away from the source of the RF or AF signals.
- Use shielded cables for the external device, or use cables with a better shield and connector.
- Shorten the length of the external device cable.
- Apply ferrites or other such devices on the cables for the external device.

Cisco cannot guarantee the performance of the system because Cisco has no control over the quality of external devices, cables, and connectors. The system will perform adequately when suitable devices are attached using good quality cables and connectors.



---

**Caution**

In European Union countries, use only headsets that are fully compliant with the EMC Directive [89/336/EC].

---

## Cisco Product Security Overview

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

Further information regarding U.S. export regulations may be found at:

[http://www.access.gpo.gov/bis/ear/ear\\_data.html](http://www.access.gpo.gov/bis/ear/ear_data.html)

## Accessibility Features

A list of accessibility features is available upon request. You can find more information about Cisco accessibility features at this URL:


<http://www.cisco.com/web/about/responsibility/accessibility/index.html>



# Connecting Your Phone


Your system administrator will likely connect your new Cisco Unified IP Phone to the corporate IP telephony network. If that is not the case, refer to the graphics below to connect your phone.

The following graphic and table show how to connect the Cisco Unified IP Phone 7906G.

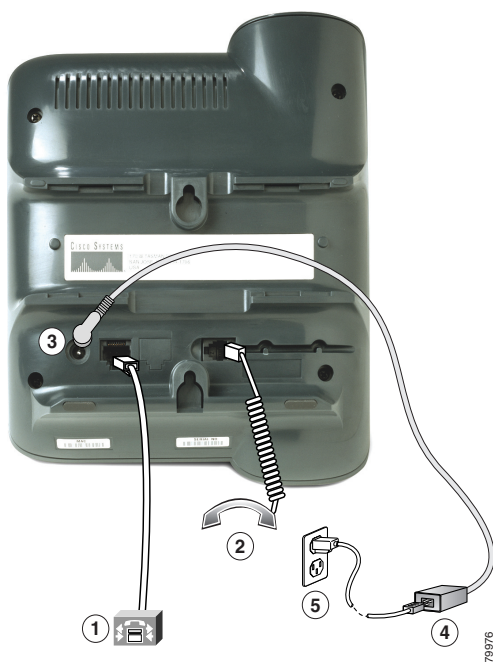

<b>1</b>	Network port (10/100 SW)	<b>4</b>	AC-to-DC power supply
<b>2</b>	Handset port	<b>5</b>	AC power cord
<b>3</b>	DC adapter port (DC48V)		


The following graphic and table show how to connect the Cisco Unified IP Phone 7911G:

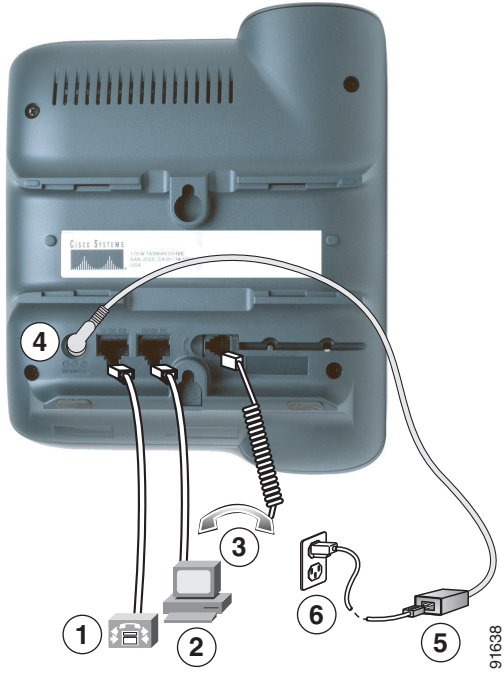

<b>1</b>	Network port (10/100 SW)	<b>4</b>	DC adapter port (DC48V)
<b>2</b>	Access port (10/100 PC)	<b>5</b>	AC-to-DC power supply
<b>3</b>	Handset port	<b>6</b>	AC power cord

## Adjusting the Handset Rest

When you connect your phone, you might want to adjust the handset rest to ensure that the receiver will not slip out of the cradle. See the table below for instructions.

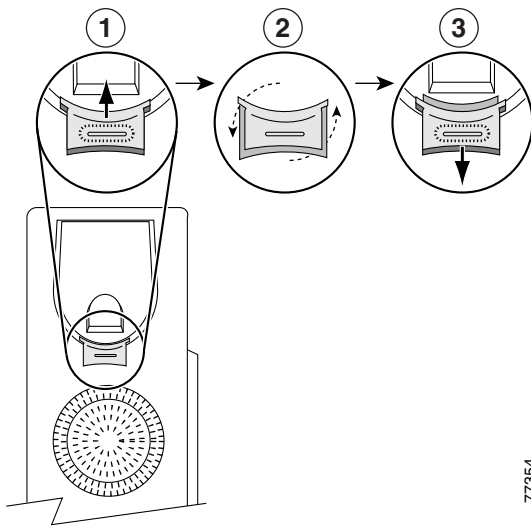

77354

<b>1</b>	Set the handset aside and pull the square plastic tab from the handset rest.
<b>2</b>	Rotate the tab 180 degrees.
<b>3</b>	Slide the tab back into the handset rest. An extension protrudes from the top of the rotated tab. Return the handset to the handset rest.

## Registering with TAPS

After your phone is connected to the network, your system administrator might ask you to auto-register your phone using the Tool for Auto-Registered Phones Support (TAPS). TAPS might be used either for a new phone or to replace an existing phone.

To register with TAPS, pick up the handset, enter the TAPS extension provided by your system administrator, and follow the voice prompts. You might need to enter your entire extension, including the area code. After your phone displays a confirmation message, hang up. The phone will restart.

## Headset Support

Although Cisco Systems performs limited internal testing of third-party headsets for use with the Cisco Unified IP Phones, Cisco does not certify or support products from headset (or handset) vendors.

Cisco recommends the use of good quality external devices, for example, headsets that are screened against unwanted radio frequency (RF) and audio frequency (AF) signals. Depending on the quality of these devices and their proximity to other devices such as mobile phones and two-way radios, some audio noise or echo may still occur. An audible hum or buzz may be heard by either the remote party or by both the remote party and the Cisco Unified IP Phone user. Humming or buzzing sounds can be caused by a range of outside sources: for example, electric lights, electric motors, or large PC monitors. See [Using External Devices, page 3](#) for more information.



---

**Note** In some cases, hum may be reduced or eliminated by using a local power cube or power injector.

---

These environmental and hardware inconsistencies in the locations where Cisco Unified IP Phones are deployed means that there is not a single headset solution that is optimal for all environments.

Cisco recommends that customers test headsets in their intended environment to determine performance before making a purchasing decision and deploying en mass.

### **Audio Quality Subjective to the User**

Beyond the physical, mechanical and technical performance, the audio portion of a headset must sound good to the user and to the party on the far end. Sound quality is subjective and Cisco cannot guarantee the performance of any headsets. However, a variety of headsets from leading headset manufacturers have been reported to perform well with Cisco Unified IP Phones. See manufacturer's sites for details.



# An Overview of Your Phone

Cisco Unified IP Phone 7906G and 7911G are full-feature telephones that provide voice communication over the same data network that your computer uses, allowing you to place and receive calls, put calls on hold, transfer calls, make conference calls, and so on.

In addition to basic call-handling features, your Cisco Unified IP Phone 7906G and 7911G can provide specialized or advanced telephony features that extend your call-handling capabilities. Depending on configuration, your phone supports:




 
- Access to network data, XML applications, and web-based services.
- Online customizing of phone features and services from your Cisco Unified CM User Options web pages.

## Understanding Buttons and Hardware

You can use this graphic below to identify the buttons and hardware on your phone.



91031

	<b>Item</b>	<b>Description</b>	<b>For more information, see...</b>
<b>1</b>	Phone screen	Displays phone menus and call activity including caller ID, call duration, and call state.	<a href="#">Accessing Applications Menus, page 12</a> and <a href="#">Understanding Feature Availability, page 12.</a>
<b>2</b>	Cisco Unified IP Phone series	Indicates your Cisco Unified IP Phone model series.	—
<b>3</b>	Softkey buttons	Each activates a softkey option displayed on your phone screen.	<a href="#">Softkey Definitions, page 1.</a>
<b>4</b>	Navigation button 	Allows you to scroll through menu items and highlight items. When the phone is on-hook, displays your Speed Dials.	<a href="#">Accessing Applications Menus, page 12</a> and <a href="#">Speed Dialing, page 28.</a>
<b>5</b>	Applications Menu button 	Displays the Applications menu that provides access to a voice message system, phone logs and directories, settings, services, and help.	<a href="#">Accessing Applications Menus, page 12.</a>
<b>6</b>	Hold button 	Places the active call on hold, resumes a call on hold, and switches between an active call and a call on hold.	<a href="#">Using Hold and Resume, page 18.</a>
<b>7</b>	Keypad	Allows you to dial phone numbers, enter letters, and choose menu items.	<a href="#">Basic Call Handling, page 14.</a>
<b>8</b>	Volume button 	Controls the handset, headset, speaker, and ringer volume.	<a href="#">Using a Handset, Headset, and Speaker, page 42.</a>
<b>9</b>	Handset with light strip	The light strip on the handset indicates an incoming call or new voice message.	<a href="#">Accessing Voice Messages, page 53.</a>
<b>10</b>	Footstand	Allows the phone to stand at a convenient angle on a desk or table.	—











## Understanding Lines vs. Calls

To avoid confusion about lines and calls, refer to these descriptions:

- Lines—Each line corresponds to a phone number (or extension) that others can use to call you. Your phone can support one line.
- Calls—Each line can support multiple calls. By default, your phone supports up to six connected calls, but your system administrator can adjust this number according to your needs. Only one call can be active at any time; other calls are automatically placed on hold.






## Understanding Line and Call Icons

Your phone displays icons to help you determine the call and line state (on-hook, on hold, ringing, connected, and so on).





Icon	Call or line state	Description
	On-hook line	No call activity on this line.
	Off-hook line	You are dialing a number or an outgoing call is ringing.
	Connected call	You are connected to the other party.
	Ringing call	A call is ringing on your line.
	Call on hold	You have put this call on hold. See <a href="#">Using Hold and Resume, page 18</a> .
	Remote call on hold	Another phone that shares your line has put a call on hold. See <a href="#">Using Hold and Resume, page 18</a> .
	Remote-in-use	Another phone that shares your line has a connected call. See <a href="#">Understanding Shared Lines, page 32</a> .
	Reverting call	A holding call is reverting to your phone. See <a href="#">Using Hold and Resume, page 18</a> .
	Authenticated call	See <a href="#">Making and Receiving Secure Calls, page 34</a> .
	Encrypted call	See <a href="#">Making and Receiving Secure Calls, page 34</a> .

## Accessing Applications Menus


Use the Applications menus to access phone features.

If you want to...	Then...
Access the Applications menus	Press  to display a list of Applications: Messages, Directory, Settings, Services, and Help.
Scroll through a list or menu	Press  .
Select a menu item	Press  to highlight a menu item, then press <b>Select</b> .  You can also press the number on the keypad that corresponds to the number for the menu item.
Go back one level in a menu	Press <b>Exit</b> . (Note that if you press <b>Exit</b> from the top-level of a menu, the menu will close.)
Close a menu (and return to the Applications menu)	Press <b>Exit</b> one or more times until the menu closes, or press  .
Exit the Applications menu	Press  or <b>Exit</b> .

### Tip

After you press , the LED turns green and stays lit while you are using the Applications menus. If you depart from an application without pressing  or **Exit** (for example, to answer a new call), the phone screen display may change but the  button stays green. If you press  again, the application that you were using resumes at the point when it was interrupted.

## Accessing the Help System on Your Phone


The Cisco Unified IP Phone 7906G and 7911G provide a comprehensive online help system. To view the phone help, press  and choose **Help**.

## Understanding Feature Availability

Depending on your phone system configuration, features included in this Phone Guide might not be available to you or might work differently on your phone. Contact your support desk or system administrator for information about feature operation or availability.

## Understanding SIP vs. SCCP

Your phone can be configured to work with one of two signaling protocols: SIP (Session Initiation Protocol) or SCCP (Skinny Call Control Protocol). Your system administrator determines this configuration.

Phone features can vary depending on the protocol. This Phone Guide indicates which features are protocol-specific. To learn which protocol your phone is using, you can ask your system administrator or you can choose  > **Model Information** > **Call Control Protocol** on your phone.

# Basic Call Handling

You can perform basic call-handling tasks using a range of features and services. Feature availability can vary; see your system administrator for more information.

## Placing a Call—Basic Options

Here are some easy ways to place a call on your Cisco Unified IP Phone.


If you want to...	Then...	For more information, see...
Place a call	Pick up the handset and dial the number.	<a href="#">An Overview of Your Phone, page 9.</a>
Dial on-hook (with dial tone)	Press <b>New Call</b> and dial the number.	—
Redial a number	Press <b>Redial</b> .	—
Place a call when another call is active	<ol style="list-style-type: none"><li>1. Press <b>⊙</b>.</li><li>2. Press <b>New Call</b>.</li><li>3. Enter a number.</li></ol>	<a href="#">Using Hold and Resume, page 18.</a>
Dial from a call log	<ol style="list-style-type: none"><li>1. Press <b>⊕</b> and select <b>Directories &gt; Missed Calls, Received Calls, or Placed Calls</b>.</li><li>2. Scroll to the number and press <b>Dial</b>.</li></ol>	<a href="#">Using Call Logs, page 47.</a>

### Tips

- You can dial on-hook without a dial tone (pre-dial). To pre-dial, enter a number, then go off-hook by lifting the handset and press **Dial**.
- When you pre-dial, your phone tries to anticipate the number you are dialing by displaying matching numbers (if available) from your Placed Calls log. This is called Auto Dial. To call a number displayed with Auto Dial, scroll to it, press **Dial**, and go off-hook.
- If you make a mistake while dialing, press << to erase digits.
- If parties on a call hear a beep tone, the call might be monitored or recorded. Ask your system administrator for more information.
- Your phone might be set up for international call logging, which is indicated by a “+” symbol on the call logs, redial, or call directory entries. See your system administrator for more information.

## Placing a Call—Additional Options

You can place calls using special features and services that might be available on your phone. See your system administrator for more information about these additional options.

If you want to...	Then...	For more information, see...
Dial from a corporate directory on your personal computer using Cisco WebDialer	<ol style="list-style-type: none"> <li>1. Open a web browser and go to a WebDialer-enabled corporate directory.</li> <li>2. Click the number that you want to dial.</li> </ol>	Using <a href="#">Cisco WebDialer</a> , page 64.
Use CallBack to receive notification when a busy or ringing extension is available	<ol style="list-style-type: none"> <li>1. Press <b>CallBack</b> while listening to the busy tone or ring sound.</li> <li>2. Hang up. Your phone alerts you when the line is free.</li> <li>3. Place the call again.</li> </ol> <p><b>Note</b> The CallBack feature is disabled on a Call Chaperone user's Cisco Unified IP Phone when the calls are being chaperoned.</p>	Your system administrator.
Make a priority (precedence) call (SCCP phones only)	Enter the Multilevel Precedence and Preemption (MLPP) access number, then enter a phone number.	<a href="#">Prioritizing Critical Calls</a> , page 36.
Dial from a Personal Address Book (PAB) entry	<ol style="list-style-type: none"> <li>1. Press  and select <b>Directories &gt; Personal Directory</b> to log in.</li> <li>2. Choose <b>Personal Address Book</b> and search for a listing.</li> </ol>	<ul style="list-style-type: none"> <li>• <a href="#">Using the Cisco Unified CM User Options Web Pages</a>, page 54.</li> <li>• <a href="#">Using Personal Directory on Your Phone</a>, page 50.</li> </ul>
Place a call using a billing or tracking code (SCCP phones only)	<ol style="list-style-type: none"> <li>1. Dial a number.</li> <li>2. After the tone, enter a client matter code (CMC) or a forced authorization code (FAC).</li> </ol>	Your system administrator.
Place a call using your Cisco Extension Mobility profile	Log in to the Cisco Extension Mobility service on a phone.	<a href="#">Using Cisco Extension Mobility</a> , page 37.

If you want to...	Then...	For more information, see...
Make a call from a mobile phone using Mobile Voice Access	<ol style="list-style-type: none"> <li>1. Obtain your Mobile Voice Access number and End user PIN from your system administrator.</li> <li>2. Dial your assigned Mobile Voice access number.</li> <li>3. Enter your mobile phone number (if requested) and PIN.</li> <li>4. Press <b>1</b> to make a call to an enterprise IP phone.</li> <li>5. Dial a desktop phone number other than your desktop phone number.</li> </ol>	<a href="#">Managing Business Calls Using a Single Phone Number, page 39.</a>
Place a call using Fast Dial	<p><b>Note</b> Before using this option, your system administrator must configure this feature and assign a service URL to the line button. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> <li>1. Press the Fast Dial line button.</li> <li>2. Scroll to or press the index number to find and select an entry. The system dials the specified number.</li> </ol>	<a href="#">Configuring Fast Dials on the Web, page 56</a> and <a href="#">Using Your Personal Address Book on the Web, page 55</a>
Place a call using your PAB	<p><b>Note</b> Before using this option, your system administrator must configure this feature and assign a service URL to the line button. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> <li>1. Press the PAB line button.</li> <li>2. Access the contact and select the number. The system dials the specified number.</li> </ol>	<a href="#">Configuring Fast Dials on the Web, page 56</a> and <a href="#">Using Your Personal Address Book on the Web, page 55</a>



## Answering a Call

You can answer a call by simply lifting the handset, or you can use other options if they are available on your phone.

If you want to...	Then...	For more information, see...
Switch from a connected call to answer a new call	Press <b>Answer</b> .	<a href="#">Using Hold and Resume, page 18.</a>
Answer a call using call waiting	Press <b>Answer</b> .	<a href="#">Using Hold and Resume, page 18.</a>
Send a call to a voice message system	Press <b>iDivert</b> .	<a href="#">Sending a Call to a Voice Message System, page 21.</a>
Automatically connect incoming calls	Use AutoAnswer.	<a href="#">Using AutoAnswer, page 44.</a>
Retrieve a parked call on another phone	Use Call Park or Directed Call Park.	<a href="#">Storing and Retrieving Parked Calls, page 31.</a>
Use your phone to answer a call ringing elsewhere	Use Call Pickup.	<a href="#">Picking Up a Redirected Call on Your Phone, page 30.</a>
Answer a priority call (SCCP phones only)	Hang up the current call and press <b>Answer</b> .	<a href="#">Prioritizing Critical Calls, page 36.</a>
Answer a call on your mobile phone or other remote destination	Set up Mobile Connect and answer your phone. When you enable Mobile Connect: <ul style="list-style-type: none"> <li>• Your desktop and remote destinations receive calls simultaneously.</li> <li>• When you answer the call on your desktop phone, the remote destinations stop ringing, are disconnected, and display a missed call message.</li> <li>• When you answer the call on one remote destination, the other remote destinations stop ringing, are disconnected, and a missed call message is shown on the other remote destinations.</li> </ul>	<a href="#">Managing Business Calls Using a Single Phone Number, page 39.</a>

## Tips


 

- If parties on a call hear a beep tone, the call might be monitored or recorded. Ask your system administrator for more information.
- A Call Chaperone user cannot answer an incoming call when the calls are being chaperoned.

## Ending a Call

To end a call, simply hang up. Here are some more details.


If you want to...	Then...
Hang up while using the handset	Return the handset to its cradle. Or press <b>EndCall</b> .
Hang up while monitoring a call (using the speaker)	Press <b>EndCall</b> .
Hang up one call, but preserve another call on the same line	Press <b>EndCall</b> . If necessary, remove the call from hold first.



## Using Hold and Resume

You can hold and resume calls. When you put a call on hold, the Hold icon  appears next to the call timer and in the line area. When using a shared line and another phone user puts the call on hold, the Remote Hold icon  appears next to the call timer and in the line area. In both cases, the hold LED is solid red .


If the Hold Reversion feature is enabled for your phone, a call that you put on hold reverts back to ringing after a certain period of time. The “reverting” calls remains on hold until you resume it or until Hold Reversion times out.

Your phone indicates the presence of a reverting call by:

- Alerting you at intervals with a single ring (or flash or beep, depending on your phone line setting).
- Briefly displaying a “Hold Reversion” message in the status bar at the bottom of the phone screen.
- Displaying the animated Hold Reversion icon  next to the caller ID for the held call.


If you want to...	Then...
Put a call on hold	<ol style="list-style-type: none"><li>1. Make sure the call you want to put on hold is highlighted.</li><li>2. Press .</li></ol>
Remove a call from hold	<ol style="list-style-type: none"><li>1. Make sure the appropriate call is highlighted.</li><li>2. Press .</li></ol>

## Tips

- Engaging the Hold feature typically generates music or a beeping tone.
- When a held call is highlighted, the Hold button  becomes lit (red). When a call that is not held is highlighted, and there are other held calls on the line, the Hold button changes to blinking (red).
- If you receive an alert for an incoming call and a reverting call at the same time, by default your phone will shift the focus of the phone screen to display the incoming call. Your system administrator can change this focus priority setting.
- If you use a shared line, Hold Reversion rings only on the phone that put the call on hold, not on the other phones that share the line.
- The duration between Hold Reversion alerts is determined by your system administrator.
- The Hold feature is disabled on a Call Chaperone user's Cisco Unified IP Phone when the calls are being chaperoned.

## Switching Between Multiple Calls

You can switch between multiple calls on your phone.

If you want to...	Then...
Switch between connected calls	<ol style="list-style-type: none"> <li>1. Make sure the call that you want to switch to is highlighted.</li> <li>2. Press . Any active call is placed on hold and the selected call is resumed.</li> </ol>
Switch from a connected call to answer a ringing call	Press <b>Answer</b> . Any active call is placed on hold.

## Switching an In-Progress Call to Another Phone

You can switch in-progress calls between the desktop phone and your mobile phone or other remote destination.

If you want to...	Then...
Switch an in-progress call on your desktop phone to a mobile phone	<ol style="list-style-type: none"> <li>1. Press the <b>Mobility</b> softkey and select <b>Send call to mobile</b>.</li> <li>2. Answer the in-progress call on your mobile phone.</li> </ol>

If you want to...	Then...
Switch an in-progress call from a mobile phone to your desktop phone	<ol style="list-style-type: none"> <li data-bbox="370 191 1150 250">1. Hang up the call on your mobile phone to disconnect the mobile phone, but not the call.</li> <li data-bbox="370 263 1197 321">2. Press <b>Answer</b> softkey on your desk phone within 4 seconds and start talking on the desk phone.</li> </ol>
Switch an in-progress call from a mobile phone to a desk phone sharing the same line (Session Handoff)	<ol style="list-style-type: none"> <li data-bbox="370 337 1204 428">1. While on your mobile phone, press the access code for the Session Handoff feature (for example, *74). See your system administrator for a list of access codes.</li> <li data-bbox="370 441 1150 500">2. Hang up the call on your mobile phone to disconnect the mobile phone, but not the call.</li> <li data-bbox="370 513 1204 604">3. Press the Answer softkey on your desk phone within 10 seconds and start talking on the desk phone. The number of seconds to answer the call on your desk phone is set by your system administrator.</li> </ol> <p data-bbox="365 610 1204 703">The other Cisco Unified devices that share the same line display a Remote in Use message. The number of seconds to resume the call depends on the configuration set by the system administrator.</p>

## Viewing Multiple Calls

Understanding how multiple calls are displayed on your phone can help you organize your call-handling efforts.

Your phone displays calls as follows for the highlighted line:

- Calls with the highest precedence and longest duration display at the top of the list.
- Calls of a similar type are grouped together. For example, calls that you have interacted with are grouped near the top, and calls on hold are grouped last.


## Transferring Calls

Transfer redirects a connected call. The *target* is the number to which you want to transfer the call.

If you want to...	Then...
Transfer a call without talking to the transfer recipient	<ol style="list-style-type: none"> <li data-bbox="419 1263 861 1295">1. From an active call, press <b>Transfer</b>.</li> <li data-bbox="419 1302 740 1334">2. Enter the target number.</li> <li data-bbox="419 1341 1204 1373">3. Press <b>Transfer</b> again to complete the transfer or <b>EndCall</b> to cancel.</li> </ol> <p data-bbox="413 1380 1219 1448"><b>Note</b> If your phone has on-hook transfer enabled, complete the transfer by hanging up.</p>

If you want to...	Then...
Talk to the transfer recipient before transferring a call (consult transfer)	<ol style="list-style-type: none"> <li>1. From an active call, press <b>Transfer</b>.</li> <li>2. Enter the target number.</li> <li>3. Wait for the transfer recipient to answer.</li> <li>4. Press <b>Transfer</b> again to complete the transfer or <b>EndCall</b> to cancel.</li> </ol> <p><b>Note</b> If your phone has on-hook transfer enabled, complete the transfer by hanging up.</p>
Redirect a call to a voice message system	Press <b>iDivert</b> . For more information, see <a href="#">Sending a Call to a Voice Message System, page 21</a> .

### Tips

- If on-hook transfer is enabled on your phone, you can either hang up to complete the call, or press **Transfer** and then hang up.
- If on-hook transfer is *not* enabled on your phone, hanging up without pressing **Transfer** again places the call on hold.
- You cannot use **Transfer** to redirect a call on hold. Press  again to remove the call from hold before transferring it.
- The Transfer feature is disabled on a Call Chaperone user's Cisco Unified IP Phone when the calls are being chaperoned.

## Sending a Call to a Voice Message System

You can use **iDivert** to send an active, ringing, or on-hold call to your voice message system. Depending on the type of call and your phone configuration, you can also use **iDivert** to send the call to another party's voice message system.

- If the call was originally sent to someone else's phone, **iDivert** allows you to redirect the call either to your own voice message system or to the original called party's voice message system. Your system administrator must make this option available to you.
- If the call was sent to you directly (not transferred or forwarded to you), or if your phone does not support the option described above, using **iDivert** redirects the call to your voice message system.

If you want to...	Then...
Send an active, ringing, or on-hold call to a voice message system	Press <b>iDivert</b> . One of two things occurs: <ul style="list-style-type: none"> <li>• The call is transferred to your voice message system.</li> <li>• Your phone screen displays a menu that allows you to choose between your voice message system or the voice message system of the original called party. Choose an option to redirect the call.</li> </ul>

### Tips

- If your phone displays a menu that disappears before you make your selection, you can press **iDivert** again to re-display the menu. You can also ask your system administrator to configure a longer timeout value.
- When you switch an in-progress call from your mobile phone to Cisco Unified devices that share the same line (Session Handoff), the **iDivert** feature is disabled on the Cisco Unified devices. The **iDivert** feature returns when the call ends.

## Forwarding Calls to Another Number



You can use the call forwarding features to redirect incoming calls from your phone to another number.

Your system administrator might allow you to choose from two types of call forwarding features:

- Unconditional call forwarding (Call Forward All)—Applies to all calls that you receive.
- Conditional call forwarding (Call Forward No Answer, Call Forward Busy, Call Forward No Coverage)—Applies to certain calls that you receive, according to conditions.

You can access Call Forward All on your phone or from your Cisco Unified CM User Options web pages; conditional call forwarding features are accessible only from your User Options web pages. Your system administrator determines which call forwarding features are available to you.

If you want to...	Then...
Set up Call Forward All on your line	Press <b>CFwdALL</b> and enter a target phone number.
Cancel Call Forward All on your line	Press <b>CFwdALL</b> .

If you want to...	Then...
Verify that Call Forward All is enabled on your line	Look for: <ul style="list-style-type: none"> <li>• Alternating call forwarding icons   displayed next to your phone number.</li> <li>• The call forward target number in the status line.</li> </ul>
Set up or cancel call forwarding remotely	<ol style="list-style-type: none"> <li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 54.</a>)</li> <li>2. Access your call forwarding settings. (See <a href="#">Controlling User Settings on the Web, page 60.</a>)</li> </ol>

## Tips

- Enter the call forward target number exactly as you would dial it from your phone. For example, enter an access code or the area code, if necessary.
- You can forward your calls to a traditional analog phone or to another IP phone, although your system administrator might restrict the call forwarding feature to numbers within your company.
- Call forwarding is phone line specific. If a call reaches you on a line where call forwarding is not enabled, the call will ring as usual.
- Your system administrator can enable a call forward override feature that allows the person receiving your forwarded calls to reach you. With override enabled, a call placed from the target phone to your phone is not forwarded, but rings through.
- Your phone may reject your attempt to set up Call Forward All directly on the phone if the target number that you enter would create a call forwarding loop or would exceed the maximum number of links permitted in a call forwarding chain.
- When you switch an in-progress call from your mobile phone to Cisco Unified devices that share the same line (Session Handoff), the Call Forward feature is disabled on the Cisco Unified devices. The Call Forward feature returns when the call ends.

## Using Do Not Disturb


You can use the Do Not Disturb (DND) feature to turn off only the ringer on your phone or to turn off all audible and visual notifications of incoming calls. Your system administrator enables DND for your phone.

When DND and Call Forward are both enabled on your phone, calls are forwarded and the caller does not hear a busy tone.

DND interaction with other types of calls includes:

- DND does not affect intercom calls or non-intercom priority calls.
- If both DND and auto-answer are enabled, only intercom calls will be auto-answered.

- When you switch an in-progress call from your mobile phone to Cisco Unified devices that share the same line (Session Handoff), the DND feature is disabled on the Cisco Unified devices. The DND feature returns when the call ends.

If you want to...	Then...
Turn on DND	Press DND. “Do Not Disturb” displays on the status line, and the ring tone is turned off.
Turn off DND	Press the DND softkey or: <ol style="list-style-type: none"> <li>1. Press  &gt; <b>Device Configuration &gt; Call Preferences &gt; Do Not Disturb.</b></li> <li>2. Select <b>No</b>, and then press <b>Save</b>.</li> </ol>
Customize DND settings	If your system administrator configured DND settings to appear on the User Options page, follow these steps: <ol style="list-style-type: none"> <li>1. Log in to your User Options web pages. See <a href="#">Accessing Your User Options Web Pages, page 54</a>.</li> <li>2. From the drop-down menu, choose <b>User Options &gt; Device</b>.</li> <li>3. You can set the following options:               <ul style="list-style-type: none"> <li>– Do Not Disturb—Set to enable/disable DND.</li> <li>– DND Option—Choose either Call Reject (to turn off all audible and visual notifications) or Ringer Off (to turn off only the ringer).</li> <li>– DND Incoming Call Alert (applies to either DND option set)—Set the alert to beep only, flash only, disable the alert, or choose “None” (to use the “Alert” setting configured by your system administrator).</li> </ul> </li> </ol>

## Making Conference Calls

Your Cisco Unified IP Phone allows you to talk simultaneously with multiple parties in a conference call.

## Using Conference Features

You can create a conference in various ways, depending on your needs and the features that are available on your phone.



- **Conference**—Allows you to create a standard (ad hoc) conference by calling each participant. Use the **Confrn** softkey. Conference is available on most phones.
- **Join**—Allows you to create a standard (ad hoc) conference by combining existing calls. Use the **Join** softkey.
- **cBarge**—Allows you to create a standard (ad hoc) conference by adding yourself to a call on a shared line. Use the **cBarge** softkey. cBarge is only available on phones that use shared lines.
- **Meet-Me**—Allows you to create or join a conference by calling a conference number. Use the **MeetMe** softkey.


## Using Conference

Conference allows you to call each participant. Conference is available on most phones.

If you want to...	Then...
Create a conference by calling participants	<ol style="list-style-type: none"> <li>1. From a connected call, press <b>Confrn</b>.</li> <li>2. Enter the participant's phone number.</li> <li>3. Wait for the call to connect.</li> <li>4. Press <b>Confrn</b> again to add the participant to your call.</li> <li>5. Repeat to add additional participants.</li> </ol>
Add new participants to an existing conference	<p>Repeat the steps listed above.</p> <p>Your system administrator determines whether non-initiators of a conference can add or remove participants.</p>
See a list of participants or remove participants	See <a href="#">Viewing or Removing Conference Participants, page 27</a> .

## Using Join

Join allows you to combine two or more existing calls to create a conference in which you are a participant.

If you want to...	Then...
Create a conference by joining together existing calls	<ol style="list-style-type: none"> <li>1. From an active call, highlight another call that you want to include in the conference and press <b>Select</b>. Selected calls display this icon .</li> <li>2. Repeat this step for each call that you want to add.</li> <li>3. Press <b>Join</b>. (You may need to press the <b>more</b> softkey to see <b>Join</b>.)</li> </ol>

If you want to...	Then...
Join together two existing conferences	Use the <b>Join</b> or <b>DirTrfr</b> softkeys. Check with your system administrator to see if this feature is available to you.
See a list of participants or remove participants	See <a href="#">Viewing or Removing Conference Participants, page 27</a> .

## Using cBarge

You can create a conference by using cBarge to add yourself to a call on a shared line.

If you want to...	Then...
Create a conference by barging a call on a shared line	Highlight the call and press <b>cBarge</b> to complete the action. See <a href="#">Using a Shared Line, page 32</a> for more information.
See a list of participants or remove participants	See <a href="#">Viewing or Removing Conference Participants, page 27</a> .

## Using Meet-Me

Meet-Me conferencing allows you to start or join a conference by calling the conference number.





If you want to...	Then...
Start a Meet-Me conference	<ol style="list-style-type: none"> <li>1. Obtain a Meet-Me phone number from your system administrator.</li> <li>2. Distribute the number to participants.</li> <li>3. When you are ready to start the meeting, go off-hook to get a dial tone, then press <b>MeetMe</b>.</li> <li>4. Dial the Meet-Me conference number. Participants can now join the conference by dialing in.</li> </ol> <p><b>Note</b> Participants hear a busy tone if they call the conference before the initiator has joined. In this case, participants must call back.</p>
Join a Meet-Me conference	<p>Dial the Meet-Me conference number (provided by the conference initiator).</p> <p><b>Note</b> You will hear a busy tone if you call the conference before the initiator has joined. In this case, try your call again.</p>
End a Meet-Me conference	<p>All participants must hang up.</p> <p>The conference does not automatically end when the conference initiator disconnects.</p>

**Tip**

If you call a secure Meet-Me conference number from a non-secure phone, your phone displays the message, “Device Not Authorized.” For more information, see [Making and Receiving Secure Calls](#), page 34.

## Viewing or Removing Conference Participants

During a standard (ad hoc) conference, you can view a list of participants and remove participants.

View a list of conference participants	Press <b>ConfList</b> . Participants are listed in the order in which they join the conference with the most recent additions at the top.
Get an updated list of conference participants	While viewing the conference list, press <b>Update</b> .
See who initiated the conference	While viewing the conference list, locate the participant listed at the bottom of the list with an asterisk (*) next to the name.
Remove any conference participant	While viewing the conference list, highlight the participant’s name and press <b>Remove</b> .
Drop the last participant added to the conference	While viewing the conference list, press <b>RMLstC</b> . You can remove participants only if you initiated the conference call.
Verify that a conference call is secure	Look for the  or  icon after “Conference” on the phone screen.
Verify that a participant is calling from a secure phone	Look for the  or  icon beside the participant’s name on the phone screen.
Add more participants	See <a href="#">Using Conference</a> , page 25.

# Advanced Call Handling

---

Advanced call-handling tasks involve special features that your system administrator might configure for your phone depending on your call-handling needs and work environment.


## Speed Dialing

Speed dialing allows you to enter an index number or select a phone screen item to place a call. Depending on configuration, your phone can support several speed-dial features:

- Speed Dials
- Abbreviated Dialing
- Fast Dials



- 
- Note**
- To set up speed-dial numbers and Abbreviated Dial, you must be able to access your User Options web pages. See [Using the Cisco Unified CM User Options Web Pages, page 54](#).
  - To set up Fast Dials, you must access to the Personal Directory feature. See [Using Personal Directory on Your Phone, page 50](#).
  - Alternately, your system administrator can configure speed-dial features for you.
- 

If you want to...	Then...
Use speed-dial buttons	<ol style="list-style-type: none"><li>1. Set up speed-dial buttons. See <a href="#">Setting Up Speed Dials on the Web, page 58</a>.</li><li>2. To place a call, press  (a speed-dial button).</li></ol>
Use Abbreviated Dialing (On-hook)	<ol style="list-style-type: none"><li>1. Set up Abbreviated Dialing codes. See <a href="#">“Setting Up Speed Dials on the Web” section on page 58</a>.</li><li>2. To place a call, enter the Abbreviated Dialing code and press <b>AbbrDial</b>.</li></ol>

If you want to...	Then...
Use Abbreviated Dialing (Off-hook)	<ol style="list-style-type: none"> <li>1. Pick up the handset.</li> <li>2. Press the <b>AbbrDial</b> softkey and enter the abbreviated dial code using the keypad.</li> <li>3. Press the <b>AbbrDial</b> softkey again.</li> </ol> <p>To use Off-hook Abbreviated Dialing to conference a call:</p> <ol style="list-style-type: none"> <li>1. Press the <b>Confrn</b> softkey. The user will hear dialtone.</li> <li>2. Follow steps 2 and 3 above.</li> <li>3. Press the <b>Confrn</b> softkey again.</li> </ol> <p>To use Off-hook Abbreviated Dialing to transfer a call:</p> <ol style="list-style-type: none"> <li>1. Press the <b>Transfer</b> softkey. The user will hear dialtone.</li> <li>2. Follow steps 2 and 3 above.</li> <li>3. Press the <b>Transfer</b> softkey again.</li> </ol> <p>To use Off-hook Abbreviated Dialing while a call is on hold:</p> <ol style="list-style-type: none"> <li>1. Press the <b>NewCall</b> softkey.</li> <li>2. Follow steps 2 and 3 above.</li> </ol>
Use Fast Dial	<ol style="list-style-type: none"> <li>1. Create a Personal Address Book entry and assign a Fast Dials code. See <a href="#">Using Personal Directory on the Web, page 55</a>.</li> <li>2. To place a call, access the Fast Dial service on your phone. See <a href="#">Using Personal Directory on Your Phone, page 50</a>.</li> </ol>

# Picking Up a Redirected Call on Your Phone

Call PickUp allows you to answer a call that is ringing on a co-worker's phone by redirecting the call to your phone. You might use Call PickUp if you share call-handling tasks with coworkers.

If you want to...	Then...
Answer a call that is ringing on another extension within your call pickup group	<ol style="list-style-type: none"><li>1. Press the <b>PickUp</b> softkey. (You might have to go off-hook to display the softkey.) If your phone supports auto-pickup, you are now connected to the call.</li><li>2. If the call rings, press <b>Answer</b> to connect to the call.</li></ol>
Answer a call that is ringing on another extension outside of your call pickup group	<ol style="list-style-type: none"><li>1. Press the <b>GPickUp</b> softkey. (You might have to go off-hook to display the softkey.)</li><li>2. Enter the group pickup number. If your phone supports auto-pickup, you are now connected to the call.</li><li>3. If the call rings, press <b>Answer</b> to connect to the call.</li></ol>
Answer a call that is ringing on another extension in your group or in an associated group	<ol style="list-style-type: none"><li>1. Press the <b>OPickUp</b> softkey. (You might have to go off-hook to display the softkey.) If your phone supports auto-pickup, you are now connected to the call.</li><li>2. If the call rings, press <b>Answer</b> to connect to the call.</li></ol>
Answer a call that is ringing on a particular extension (line number)	<ol style="list-style-type: none"><li>1. Press the <b>GPickUp</b> softkey. (You might have to go off-hook to display the softkey.)</li><li>2. Enter the line number with the call that you want to pick up. For example, if the call that you want to pick up is ringing on line 12345, enter 12345. If your phone supports auto-pickup, you are now connected to the call.</li><li>3. If the call rings, press <b>Answer</b> to connect to the call.</li></ol>

## Tips

- If multiple calls are available for pick up, your phone picks up the oldest call first (the call that has been ringing for the longest time).
- If you press **GPickUp** and enter a line number, your phone picks up the ringing call on that particular line (if available).
- Depending on how your phone is configured, you might receive an audio and/or visual alert about a call to your pickup group.

## Storing and Retrieving Parked Calls

You can park a call when you want to store the call so that you or someone else can retrieve it from another phone in the Cisco Unified Communications Manager system (for example, a phone at a co-worker's desk or in a conference room).

You can park a call by using these methods:

- **Call Park**—Use the **Park** softkey to store the call. Your phone displays the call park number where the system stored your call. You must record this number and then use the same number to retrieve the call.
- **Directed Call Park**—Use the **Transfer** softkey to direct the call to an available directed call park number that you dial or speed dial. To retrieve the call from a directed call park number, you must dial the park retrieval prefix and then dial or speed dial the same directed call park number.

If you want to...	Then...
Store an active call using Call Park	<ol style="list-style-type: none"> <li>1. During a call, press <b>Park</b>. (You may need to press the <b>more</b> softkey to see <b>Park</b>.)</li> <li>2. Record the call park number displayed on your phone screen.</li> <li>3. Hang up.</li> </ol>
Retrieve a parked call	Enter the call park number from any Cisco Unified IP Phone in your network to connect to the call.
Direct and store an active call at a directed call park number	<ol style="list-style-type: none"> <li>1. During a call, press <b>Transfer</b>.</li> <li>2. Select a speed-dial number assigned to a directed call park number or dial the number.</li> <li>3. Press <b>Transfer</b> again to finish storing the number.</li> </ol>
Retrieve a parked call from a directed call park number	From any Cisco Unified IP Phone in your network, enter the park retrieval prefix and dial the directed call park number, or after entering the park retrieval prefix, select the speed-dial for the directed call park number to connect to the call.

### Tip

You have a limited time to retrieve a parked call before it reverts to ringing at the original number. See your system administrator for details.

## Logging Out of Hunt Groups

If your organization receives a large number of incoming calls, you might be a member of a hunt group. A hunt group includes a series of directory numbers that share the incoming call load. When the first directory number in the hunt group is busy, the system hunts for the next available directory number in the group and directs the call to that phone.

When you are away from your phone, you can prevent hunt group calls from ringing your phone by logging out of hunt groups.

If you want to...	Then...
Log out of hunt groups to temporarily block hunt group calls	Press <b>HLog</b> . Your phone screen displays, “Logged out of Hunt Group.”
Log in to receive hunt group calls	Press <b>HLog</b> .

### Tip

Logging out of hunt groups does not prevent non-hunt group calls from ringing your phone.


## Using a Shared Line

Your system administrator might ask you to use a shared line if you:

- Have multiple phones and want one phone number
- Share call-handling tasks with coworkers
- Handle calls on behalf of a manager

## Understanding Shared Lines

### Remote-in-Use Icon

The remote-in-use icon  appears when another phone that shares your line has a connected call. You can place and receive calls as usual on the shared line, even when the remote-in-use icon appears.

### Sharing Call Information and Barging

Phones that share a line each display information about calls that are placed and received on the shared line. This information might include caller ID and call duration. (See [Privacy](#), page 33 for exceptions.)

When call information is visible in this way, you and coworkers who share a line can add yourselves to calls using either **Barge** or **cBarge**. See [Using Barge to Add Yourself to a Shared-Line Call](#), page 33.



## Privacy

If you do not want coworkers who share your line to see information about your calls, enable the Privacy feature. Doing so also prevents coworkers from barging your calls. See [Preventing Others from Viewing or Barging a Shared-Line Call](#), page 34.




---

**Note** The maximum number of calls that a shared line supports can vary by phone.

---

## Using Barge to Add Yourself to a Shared-Line Call

You can use barge features (cBarge and Barge) to add yourself to calls on your shared line. (Calls must be non-private calls. See [Using a Shared Line](#), page 32.)

### Understanding Barge Features


#### cBarge and Barge

Depending on how your phone is configured, you can add yourself to a call on a shared line using either cBarge or Barge:

- cBarge converts the call into a standard conference, allowing you to add new participants. (See [Making Conference Calls](#), page 24 for information about standard conferences.)
- Barge allows you to add yourself to the call but does not convert the call into a conference or allow you to add new participants.

### Using Barge Features

The table below describes how to use barge features (cBarge or Barge) to add yourself to a call on a shared line.

 

If you want to...	Then...
See if the shared line is in use	Look for the remote-in-use icon  .
Add yourself to a call on a shared line	<ol style="list-style-type: none"> <li>1. Highlight a remote-in-use call.</li> <li>2. Press Barge. (You may need to press the more softkey to display Barge.)</li> </ol> Other parties hear a beep tone announcing your presence.
View conference participants (if you used cBarge)	See <a href="#">Viewing or Removing Conference Participants</a> , page 27.

## Tips

- When you barge a call, other parties might hear a beep tone announcing your presence. With cBarge, other parties hear a brief audio interruption and the phone screen changes to display conference details.
- When you leave a call that you have barged, other parties hear a beep-beep tone.
- If a phone that is using the shared line has Privacy enabled, call information and barge softkeys will not appear on the other phones that share the line.
- If a phone that is using the shared line has Privacy disabled and it is configured with Private Line Automated Ringdown (PLAR), the barge and cBarge features will still be available.
- You will be disconnected from a call that you have joined using **Barge** if the call is put on hold, transferred, or turned into a conference call.

## Preventing Others from Viewing or Barging a Shared-Line Call

If you share a phone line, you can use the Privacy feature to prevent others who share the line from viewing or barging (adding themselves to) your calls.

If you want to...	Then...
Prevent others from viewing or barging calls on a shared line	<ol style="list-style-type: none"><li>1. Press <b>more &gt; Private</b>.</li><li>2. To verify that Privacy is on, look for the Privacy-enabled icon  next to “Private” on the phone screen.</li></ol>
Allow others to view or barge calls on a shared line	<ol style="list-style-type: none"><li>1. Press <b>more &gt; Private</b>.</li><li>2. To verify that Privacy is off, look for the Privacy-disabled icon  next to “Private” on the phone screen.</li></ol>

## Tip

If the phone that shares your line has Privacy enabled, you can make and receive calls using the shared line as usual.




## Making and Receiving Secure Calls

Depending on how your system administrator has configured your phone system, your phone might support making and receiving secure calls.

Your phone can support these types of calls:

- *Authenticated* call—The identities of all phones participating in the call have been verified.
- *Encrypted* call—The phone is receiving and transmitting encrypted audio (your conversation) within the Cisco IP network. Encrypted calls are also authenticated.

- *Protected call*—The phone is receiving and transmitting encrypted audio (your conversation) with another phone. A protected call provides a similar level of security as an encrypted call, but adds additional security. If the call is protected at both ends, a security tone plays at the beginning of the conversation. Some features, such as conference calling, shared lines, Extension Mobility, and join across lines are not available when protected calling is configured. Protected calls are not authenticated.
- *Non-secure call*—At least one of the participating phones or the connection does not support these security features, or the phones cannot be verified.

If you want to...	Then...
Check the security level of a call or conference	Look for a security icon in the top right corner of the call activity area, next to the call duration timer: <ul style="list-style-type: none"> <li data-bbox="561 570 986 610"> Authenticated call or conference</li> <li data-bbox="561 643 942 683"> Encrypted call or conference</li> <li data-bbox="561 716 955 756"> Non-secure call or conference</li> </ul>
Verify that the phone on the other end of the connection is also secure	Look for the encrypted lock icon and listen for a security tone at the beginning of the call.  When encrypted calling is configured on your phone, the lock icon is displayed. However, the conversation is protected only when the security tone plays at the beginning of a call, indicating that the call is protected on both ends of the call. If your call is connected to a non-protected phone, the secure tone is not played.
Determine if secure calls can be made in your company	Contact your system administrator.

**Note**

There are interactions, restrictions, and limitations that affect how security features work on your phone. For more information, ask your system administrator.

**Note**

A device engaged in a call is either trusted or untrusted as determined by Cisco. Lock or shield icons are not displayed on a Cisco Unified IP Phone screen when a call is to or from an untrusted device, even though the call might be secure.

## Tracing Suspicious Calls

If you are receiving suspicious or malicious calls, your system administrator can add the Malicious Call Identification (MCID) feature to your phone. This feature enables you to identify an active call as suspicious, which initiates a series of automated tracking and notification messages.

<b>If you want to...</b>	<b>Then...</b>
Notify your system administrator about a suspicious or harassing call	Press <b>MCID</b> . Your phone plays a tone and displays the message, “MCID successful.”

## Prioritizing Critical Calls

(SCCP phones only)

In some specialized environments, such as military or government offices, you might need to make and receive urgent or critical calls. If you have the need for this specialized call handling, your system administrator can add Multilevel Precedence and Preemption (MLPP) to your phone.

Keep these terms in mind:

- *Precedence* indicates the priority associated with a call.
- *Preemption* is the process of ending an existing, lower priority call while accepting a higher priority call that is sent to your phone.

<b>If you...</b>	<b>Then...</b>
Want to choose a priority (precedence) level for an outgoing call	Contact your system administrator for a list of corresponding precedence numbers for calls.
Want to make a priority (precedence) call	Enter the MLPP access number (provided by your system administrator) followed by the phone number.
Hear a special ring (faster than usual) or special call waiting tone	You are receiving a priority (precedence) call. An MLPP icon on your phone screen indicates the priority level of the call.

If you...	Then...
Want to view priority level of a call	<p>Look for an MLPP icon on your phone screen:</p> <ul style="list-style-type: none"> <li>▣ Priority call</li> <li>▣ Medium priority (immediate) call</li> <li>▣ High priority (flash) call</li> <li>▣ Highest priority (flash override) or Executive Override call</li> </ul> <p>Higher priority calls are displayed at the top of your call list. If you do not see an MLPP icon, the priority level of the call is normal (routine).</p>
Want to accept a higher-priority call	Answer the call as usual. If necessary, end an active call first.
Hear a continuous tone interrupting your call	You or the other party are receiving a call that must preempt the current call. Hang up immediately to allow the higher priority call to ring through.





### Tips

- When you make or receive an MLPP-enabled call, you will hear special ring tones and call waiting tones that differ from the standard tones.
- If you enter an invalid MLPP access number, a verbal announcement will alert you of the error.
- An MLPP-enabled call retains its priority and preemptive status when you:
  - Put the call on hold
  - Transfer the call
  - Add the call to a three-way conference
  - Answer the call using PickUp
- MLPP overrides the Do Not Disturb (DND) feature.

## Using Cisco Extension Mobility

Cisco Extension Mobility (EM) allows you to temporarily configure a Cisco Unified IP Phone as your own. Once you log in to EM, the phone adopts your user profile, including your phone lines, features, established services, and web-based settings. Your system administrator must configure EM for you.

The Cisco Extension Mobility ChangePIN feature allows you to change your PIN from your Cisco Unified IP Phone.

If you want to...	Then...
Log in to EM	<ol style="list-style-type: none"> <li>1. Press  and choose <b>Services &gt; EM Service</b> (name can vary).</li> <li>2. Enter your user ID and PIN (provided by your system administrator).</li> <li>3. If prompted, select a device profile.</li> </ol>
Log out of EM	<ol style="list-style-type: none"> <li>1. Press  and choose <b>Services &gt; EM Service</b> (name can vary).</li> <li>2. When prompted to log out, press <b>Yes</b>.</li> </ol>
Change your PIN using the Change Credentials service	<ol style="list-style-type: none"> <li>1. Press  and choose <b>Services &gt; Change Credentials</b>.</li> <li>2. Enter your User ID in the <b>User ID</b> field.</li> <li>3. Enter your PIN in the <b>Current PIN</b> field.</li> <li>4. Enter your new PIN in the <b>New PIN</b> field.</li> <li>5. Enter your new PIN again in the <b>Confirm PIN</b> field.</li> <li>6. Press <b>Change</b>.</li> </ol> <p>You will see a PIN Change Successful message.</p> <ol style="list-style-type: none"> <li>7. Press <b>Exit</b>.</li> </ol>
Change your PIN using the ChangePIN softkey	<ol style="list-style-type: none"> <li>1. Press  and choose <b>Services &gt; EM Service</b> (name can vary).</li> <li>2. Press <b>ChangePIN</b>.</li> <li>3. Enter your PIN in the <b>Current PIN</b> field.</li> <li>4. Enter your new PIN in the <b>New PIN</b> field.</li> <li>5. Enter your new PIN again in the <b>Confirm PIN</b> field.</li> <li>6. Press <b>Change</b>.</li> </ol> <p>You will see a PIN Change Successful message.</p> <ol style="list-style-type: none"> <li>7. Press <b>Exit</b>.</li> </ol>

## Tips

- EM automatically logs you out after a certain amount of time. Your system administrator establishes this time limit.
- Changes that you make to your EM profile from your Cisco Unified CM User Options web pages take effect immediately if you are logged in to EM on the phone; otherwise, changes take effect the next time you log in.
- Changes that you make to the phone from your User Options web pages take effect immediately if you are logged out of EM; otherwise, changes take effect after you log out.
- Local settings controlled by the phone are not maintained in your EM profile.

## Managing Business Calls Using a Single Phone Number

Intelligent Session Control associates your mobile phone number with your business IP phone number. When you receive a call to your remote destination (mobile phone), your desk phone does not ring; only your remote destination rings. When an incoming call is answered on the mobile phone, the desk phone displays a Remote in Use message.

During a call you can also use any of your mobile phone features. For example, if you receive a call on your mobile number, you can answer the call from either your desk phone or you can hand off the call from your mobile phone to your desk phone.

If you want to...	Then...
Transfer your incoming mobile active call to desk phone	Use the various features of your mobile phone (for example, *74). Contact your system administrator for a list of access codes.

With Mobile Connect and Mobile Voice Access installed, you can use your mobile phone to handle calls associated with your desktop phone number.

If you want to...	Then...
Configure Mobile Connect	Use the User Options web pages to set up remote destinations and create access lists to allow or block calls from specific phone numbers from being passed to the remote destinations. See <a href="#">Setting Up Phones and Access Lists for Mobile Connect</a> , page 62.
Answer a call using your mobile phone	See <a href="#">Answering a Call</a> , page 17.
Switch an in-progress call between your desk phone and mobile phone	See <a href="#">Switching an In-Progress Call to Another Phone</a> , page 19.
Put a call that has been picked up on your mobile phone on hold	<ol style="list-style-type: none"> <li>1. Press the <i>Enterprise Hold</i> (name may vary) softkey. The other party is placed on hold.</li> <li>2. On your mobile phone, press the <i>Resume</i> (name may vary) softkey. See <a href="#">Switching an In-Progress Call to Another Phone</a>, page 19.</li> </ol>
Initiate a conference call on a call that has been picked up on a mobile phone	<ol style="list-style-type: none"> <li>1. Press the <i>Enterprise Conference</i> (name may vary) softkey your mobile phone.</li> <li>2. Dial your enterprise access code for conferencing to initiate a new call. The other party is placed on hold.</li> <li>3. Press the <i>Enterprise Conference</i> softkey to complete the conference set-up and include both callers in the conference.</li> </ol>

If you want to...	Then...
Connect to Mobile Voice Access	<ol style="list-style-type: none"> <li>1. From any phone, dial your assigned Mobile Voice Access number.</li> <li>2. Enter the number you are calling from, if prompted, and your PIN.</li> </ol>
Turn on Mobile Connect from your mobile phone	<ol style="list-style-type: none"> <li>1. Dial your assigned Mobile Voice access number.</li> <li>2. Enter your mobile phone number (if requested) and PIN.</li> <li>3. Press 2 to enable Mobile Connect.</li> <li>4. Choose whether to turn Mobile Connect on for all configured phones or just one: <ul style="list-style-type: none"> <li>- All phones—Enter 2.</li> <li>- One phone—Enter 1 and enter the number you want to add as a remote destination, followed by #.</li> </ul> </li> </ol>
Make a call from your mobile phone	See <a href="#">Placing a Call—Additional Options, page 15</a> .
Turn off Mobile Connect from your mobile phone	<ol style="list-style-type: none"> <li>1. Dial your assigned Mobile Voice access number.</li> <li>2. Enter your mobile phone number (if requested) and PIN.</li> <li>3. Press 3 to disable Mobile Connect.</li> <li>4. Choose whether to turn Mobile Connect off for all configured phones or just one: <ul style="list-style-type: none"> <li>- All phones—Enter 2.</li> <li>- One phone—Enter 1 and enter the number you want to remove as a remote destination, followed by #.</li> </ul> </li> </ol>
Turn on or off Mobile Connect access to all your remote destinations from your desk phone	<ol style="list-style-type: none"> <li>1. Press <b>Mobility</b> to display the current remote destination status (Enabled or Disabled).</li> <li>2. Press <b>Select</b> to change the status.</li> <li>3. Press <b>Exit</b>.</li> </ol>



**Tips**

- When calling Mobile Voice Access, you must enter the number you are calling and your PIN if any of the following are true:
  - The number you are calling from is not one of your remote destinations.
  - The number is blocked by you or your carrier (shown as “Unknown Number”).
  - The number is not accurately matched in the Cisco Unified Communications Manager database; for example, if your number is 510-666-9999, but it is listed as 666-9999 in the database, or your number is 408-999-6666, but it is entered as 1-408-999-6666 in the database.
- If you incorrectly enter any requested information (such as mobile phone number or PIN) three times in a row, the Mobile Voice Access call disconnects, and you are locked out for a period of time. Contact your system administrator if you need assistance.

# Using a Handset, Headset, and Speaker

---

The Cisco Unified IP Phone 7906G and 7911G provide a speaker for hands-free listening. You can use the speaker only to listen to a call. To talk on a call, you must use the handset.

You can use the speaker in one of two ways, depending on how your system administrator enables the phone. Your phone may be enabled for one of the following features, but not both at the same time:

- Group Listen
- Monitor (default)

## Using the Group Listen Feature

The following table shows how you can use the Group Listen feature.

<b>If you want to...</b>	<b>Then...</b>
Use the handset	Lift it to go off-hook; replace it to go on-hook.
Talk using the handset and listen on the speaker at the same time (Group Listen)	Press <b>GListen</b> . <b>Note</b> Group Listen must be enabled by your system administrator for the <b>GListen</b> softkey to display.
Turn off Group Listen and use the handset	Press <b>GLOff</b> .
Hang up after using Group Listen	Press <b>EndCall</b> or hang up.
Adjust the volume level for a call	<b>Note</b> When using Group Listen, adjusting the volume only changes the volume for the speaker and not the handset. Press the up or down <b>Volume</b> button during a call or after invoking a dial tone. Press <b>Save</b> to preserve the volume level for future calls.

## Using the Monitor Feature

The following table shows how you can use the Monitor feature.


If you want to...	Then...
Use the handset	Lift it to go off-hook; replace it to go on-hook.
Listen to the call on the speaker	Press <b>Monitor</b> and then hang up the handset. You will be able to hear the call but you will not be able to talk on the call. <b>Note</b> The <b>Monitor</b> and <b>MonOff</b> softkeys are not available if Group Listen is enabled.
Turn off the speaker and use the handset	Lift the handset, or press <b>MonOff</b> . <b>Note</b> The <b>Monitor</b> and <b>MonOff</b> softkeys are not available if Group Listen is enabled.
Turn off the speaker and hang up	Press <b>EndCall</b> .
Adjust the speaker volume level for a call	Press the up or down <b>Volume</b> button during a call or after invoking a dial tone. Press <b>Save</b> to preserve the volume level for future calls.

### Tips

- If your system administrator has disabled the speaker on your phone, the **GListen**, **GLOff**, **Monitor**, and **MonOff** softkeys will not be available to you. You must lift the handset to place and monitor calls.
- Pressing the **Volume** button changes the volume for the handset or speaker, depending on which device is in use. In Group Listen and Monitor modes, the volume adjustment is for the speaker and not the handset.



### Note

If you need to change the wideband setting for your handset (for example, if you change your handset) press  and choose **Settings > User Preferences > Audio Preferences > Wideband Handset**. If the Wideband Handset setting shows as dimmed, then this setting is not user controllable.

Check with your system administrator to be sure your phone system is configured to use wideband. If the system is not configured for wideband, you may not detect any additional audio sensitivity even when using a wideband handset. To learn more, refer to the handset documentation or ask your system administrator for assistance.

## Using a Headset

To use a headset, disconnect the handset and connect a headset to the Handset port. For information about purchasing headsets, see [Headset Support, page 7](#).

### Using Wideband with your Headset

If you connect a headset to the handset port, be sure that the Wideband Handset setting is disabled. Choose **User Preferences > Audio Preferences > Wideband Handset**.



---

**Note** If the Wideband Handset setting shows as dimmed, then this setting is not user controllable and you must contact your system administrator to change this setting.

---

## Using AutoAnswer


When AutoAnswer is enabled, your phone answers incoming calls automatically after a few rings. Your system administrator can configure AutoAnswer to use the speaker to answer calls. However, you can only monitor the call using the speaker. To talk to the caller, you must pick up the handset.

# Changing Phone Settings

You can personalize your Cisco Unified IP Phone by adjusting the ring tone, background image, and other settings.


## Customizing Rings and Message Indicators

You can customize how your phone indicates an incoming call and a new voice message. You can also adjust the ringer volume for your phone.


If you want to...	Then...
Change the ring tone	<ol style="list-style-type: none"> <li>1. Press  and select <b>Settings &gt; User Preferences &gt; Rings</b>.</li> <li>2. Select a ring tone and press <b>Play</b> to hear a sample.</li> <li>3. Press <b>Save</b> to set the ring tone, or press <b>Cancel</b>.</li> </ol>
Change the ring pattern (flash-only, ring once, beep-only, etc.)	<p>Log in to your Cisco Unified CM User Options web pages. (See the <a href="#">Accessing Your User Options Web Pages, page 54.</a>)</p> <ol style="list-style-type: none"> <li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 54.</a>)</li> <li>2. Access your call ring pattern settings. (See <a href="#">Controlling User Settings on the Web, page 60.</a>)</li> </ol> <p><b>Note</b> Before you can access this setting, your system administrator might need to enable it for you.</p>
Adjust the volume level for the phone ringer	<p>Press the Volume button while the handset is in the cradle. The new ringer volume is saved automatically.</p> <p><b>Note</b> Check with your system administrator to see if a minimum ringer-volume setting was configured.</p>
Change the way that the voice message light on your handset works	<ol style="list-style-type: none"> <li>1. Log in to your User Options web pages. (See the <a href="#">Accessing Your User Options Web Pages, page 54.</a>)</li> <li>2. Choose <b>Change the Message Waiting Lamp policy...</b></li> <li>3. Access your message indicator settings. (See <a href="#">Controlling User Settings on the Web, page 60.</a>)</li> </ol> <p><b>Note</b> Typically, the default system policy is to indicate a new voice message by displaying a steady light on the handset light strip.</p>

# Customizing the Phone Screen

You can adjust the characteristics of the phone screen.






If you want to...	Then...
Change the background image	<ol style="list-style-type: none"><li data-bbox="392 337 1163 391">1. Press  and choose <b>Settings &gt; User Preferences &gt; Background Images</b>.</li><li data-bbox="392 407 1204 435">2. Scroll through available images and press <b>Select</b> to choose an image.</li><li data-bbox="392 451 1116 479">3. Press <b>Preview</b> to see a larger view of the background image.</li><li data-bbox="392 495 915 522">4. Press <b>Exit</b> to return to the selection menu.</li><li data-bbox="392 539 1029 566">5. Press <b>Save</b> to accept the new image, or press <b>Cancel</b>.</li></ol>
Change the language on the phone screen	<ol style="list-style-type: none"><li data-bbox="392 576 1190 634">1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 54.</a>)</li><li data-bbox="392 651 1204 709">2. Access your user settings. (See <a href="#">Controlling User Settings on the Web, page 60.</a>)</li></ol>
Change the line text label	<ol style="list-style-type: none"><li data-bbox="392 722 1190 781">1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 54.</a>)</li><li data-bbox="392 797 1204 855">2. Access your line text label settings. (See <a href="#">Controlling User Settings on the Web, page 60.</a>)</li></ol>





# Using Call Logs and Directories

This section describes how you can use call logs and directories. To access both features, press  and select **Directories**.

## Using Call Logs

Your phone maintains call logs. Call logs contain records of your missed, placed, and received calls. Your phone administrator determines whether missed calls are logged in your missed calls directory for a given line appearance on your phone.

If you want to...	Then...
View your call logs	Press  , and choose <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b> . Each stores up to 100 records. To view a truncated listing, highlight it and press <b>EditDial</b> .
Display details for a single call record	<ol style="list-style-type: none"> <li>1. Press , choose <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b>.</li> <li>2. Highlight a call record.</li> <li>3. Press <b>Details</b>. Doing so displays information such as called number, calling number, time of day, and call duration (for placed and received calls only).</li> </ol>
Erase all call records in all logs	Press  , choose <b>Directories</b> , then press <b>Clear</b> .
Erase all call records in a single log	<ol style="list-style-type: none"> <li>1. Press , choose <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b>.</li> <li>2. Highlight a call record.</li> <li>3. Press <b>Clear</b>. (You may need to press the <b>more</b> softkey to display <b>Clear</b>.)</li> </ol>
Erase a single call record	<ol style="list-style-type: none"> <li>1. Press , choose <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b>.</li> <li>2. Highlight a call record.</li> <li>3. Press <b>Delete</b>.</li> </ol>

If you want to...	Then...
Dial from a call log (while not on another call)	<ol style="list-style-type: none"> <li>1. Press  and choose <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b>.</li> <li>2. Highlight a call record from the log.</li> </ol> <p><b>Note</b> If the Details softkey appears, the call is the primary entry of a multiparty call. See the <a href="#">Tips</a> section below.</p> <ol style="list-style-type: none"> <li>3. If you need to edit the displayed number, press <b>EditDial</b> followed by &lt;&lt; or &gt;&gt;. To delete the number, press <b>EditDial</b> followed by <b>Delete</b>. (You may need to press the <b>more</b> softkey to display <b>Delete</b>.)</li> <li>4. Go off-hook to place the call.</li> </ol>
Dial from a call log (while connected to another call)	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b>.</li> <li>2. Highlight a call record from the log.</li> </ol> <p><b>Note</b> If the Details softkey displays, the call is the primary entry of a multiparty call. See the <a href="#">Tips</a> section below.</p> <ol style="list-style-type: none"> <li>3. If you need to edit the displayed number, press <b>EditDial</b> followed by &lt;&lt; or &gt;&gt;. To delete the number, press <b>EditDial</b> followed by <b>Delete</b>. (You may need to press the <b>more</b> softkey to display <b>Delete</b>.)</li> <li>4. Press <b>Dial</b>.</li> <li>5. Choose one of the following to handle the original call: <ul style="list-style-type: none"> <li>– <b>Hold</b>—Puts the first call on hold.</li> <li>– <b>Transfer</b>—Transfers the first party to the second and drops you from the call. (Press <b>Transfer</b> again after dialing to complete the action.)</li> <li>– <b>Confrn</b>—Creates a conference call with all parties, including you. (Press <b>Confrn</b> again after dialing to complete the action.)</li> <li>– <b>EndCall</b>—Disconnects the first call and dials the second.</li> </ul> </li> </ol>
Place a call from a URL entry in a call log (SIP phones only)	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Missed Calls, Placed Calls, or Received Calls</b>.</li> <li>2. Highlight the URL entry that you want to dial.</li> <li>3. If you need to edit the entry, press <b>EditDial</b>. The  icon appears to indicate that you can begin editing characters in the URL entry.</li> <li>4. Press <b>Dial</b>.</li> </ol>



## Tips

- (SCCP phones only) To view the complete call record of a multiparty call (for example, of call that has been forwarded or transferred to you), highlight the call record and press **Details**. The Details record shows two entries for each missed or received multiparty call. The entries are listed in reverse chronological order:
  - The first logged entry is the name/number of the last completed call of a multiparty call received on your phone.
  - The second logged entry is the name/number of the first completed call of a multiparty call received on your phone.
- Your phone might be set up for international call logging, which is indicated by a “+” symbol on the call logs, redial, or call directory entries. See your system administrator for more information.


## Directory Dialing


Depending on configuration, your phone can provide corporate and personal directory features:

- **Corporate Directory**—Corporate contacts that you can access on your phone. Your system administrator sets up and maintains your Corporate Directory.
- **Personal Directory**—If available, personal contacts and associated speed-dial codes that you can configure and access from your phone and Cisco Unified CM User Options web pages. Personal Directory comprises the Personal Address Book (PAB) and Fast Dials.
  - PAB is a directory of your personal contacts.
  - Fast Dials allows you to assign codes to PAB entries for quick dialing.
  - For more information, see [Using the Cisco Unified CM User Options Web Pages, page 54](#).

## Using Corporate Directory on Your Phone

You can use a corporate directory to place calls to coworkers.

If you want to...	Then...
Dial from a corporate directory (while not on another call)	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Corporate Directory</b> (exact name can vary).</li> <li>2. Use your keypad to enter a full or partial name and press <b>Search</b>.</li> <li>3. To dial, select the listing, and go off-hook.</li> </ol>


If you want to...	Then...
Dial from a corporate directory (while connected to another call)	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Corporate Directory</b> (exact name can vary).</li> <li>2. Use your keypad to enter a full or partial name, and press <b>Search</b>.</li> <li>3. Scroll to a listing and press <b>Dial</b>.</li> <li>4. Choose one of the following to handle the original call: <ul style="list-style-type: none"> <li>– <b>Hold</b>—Puts the first call on hold.</li> <li>– <b>Transfer</b>—Transfers the first party to the second and drops you from the call. (Press <b>Transfer</b> again after dialing to complete the action.)</li> <li>– <b>Confrn</b>—Creates a conference call with all parties, including you. (Press <b>Confrn</b> again after dialing to complete the action.)</li> <li>– <b>EndCall</b>—Disconnects the first call and dials the second.</li> </ul> </li> </ol>



### Tip


Use the numbers on your keypad to enter characters on your phone screen. Use the Navigation button on your phone to move between input fields.

## Using Personal Directory on Your Phone

The Personal Directory feature set contains your Personal Address Book (PAB) and Fast Dials. This section describes how to set up and use Personal Directory on your phone. Alternately, see [Using Personal Directory on the Web, page 55](#).

If you want to...	Then...
Access Personal Directory (for PAB and Fast Dial codes)	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Personal Directory</b> (exact name can vary).</li> <li>2. Enter your Cisco Unified Communications Manager user ID and PIN, then press <b>Submit</b>.</li> </ol>
Search for a PAB entry	<ol style="list-style-type: none"> <li>1. Access Personal Directory, then choose <b>Personal Address Book</b>.</li> <li>2. Enter search criteria and press <b>Submit</b>.</li> <li>3. You can choose <b>Previous</b> or <b>Next</b> to move through listings.</li> <li>4. Highlight the PAB listing that you want and press <b>Select</b>.</li> </ol>
Dial from PAB entry	<ol style="list-style-type: none"> <li>1. Search for a listing.</li> <li>2. Highlight the listing and press <b>Select</b>.</li> <li>3. Press <b>Dial</b>. (You may need to press the <b>more</b> softkey to see <b>Dial</b>.)</li> </ol>


If you want to...	Then...
Delete a PAB entry	<ol style="list-style-type: none"> <li>1. Search for a listing.</li> <li>2. Highlight the listing and press <b>Delete</b>.</li> <li>3. Press <b>Edit</b>.</li> <li>4. Press <b>Delete</b>.</li> <li>5. Choose <b>OK</b> to confirm the deletion.</li> </ol>
Edit a PAB entry	<ol style="list-style-type: none"> <li>1. Search for a listing.</li> <li>2. Highlight the listing and press <b>Select</b>.</li> <li>3. Press <b>Edit</b> to modify a name or email address.</li> <li>4. If necessary, choose <b>Phones</b> to modify a phone number.</li> <li>5. Press <b>Update</b>.</li> </ol>
Add a new PAB entry	<ol style="list-style-type: none"> <li>1. Access Personal Directory, then choose <b>Personal Address Book</b>.</li> <li>2. Access the Search page by choosing <b>Submit</b>. (You do not need to input search information first.)</li> <li>3. Press <b>New</b>.</li> <li>4. Use your phone keypad to enter a name and email information.</li> <li>5. Choose <b>Phones</b> and use the keypad to enter phone numbers. Be sure to include any necessary access codes such as a 9 or 1.</li> <li>6. Choose <b>Submit</b> to add the entry to the database.</li> </ol>
Assign a Fast Dial code to a PAB entry	<ol style="list-style-type: none"> <li>1. Search for a PAB entry.</li> <li>2. Highlight the listing and press <b>Select</b>.</li> <li>3. Press <b>Fast Dial</b>.</li> <li>4. Highlight the number that you want to dial and press <b>Select</b>.</li> <li>5. Highlight any unassigned Fast Dial code that you want to assign to the number and press <b>Select</b>.</li> </ol>
Add a new Fast Dial code (not using a PAB entry)	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Personal Directory &gt; Personal Fast Dials</b>.</li> <li>2. Highlight a Fast Dial code that is unassigned and press <b>Assign</b>.</li> <li>3. Enter a phone number.</li> <li>4. Press <b>Update</b>.</li> </ol>
Search for Fast Dial codes	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Personal Directory &gt; Personal Fast Dials</b>.</li> <li>2. Choose <b>Next</b> to move through listings.</li> </ol>

If you want to...	Then...
Place a call using a Fast Dial code	<ol style="list-style-type: none"> <li>1. Search for a Fast Dial code.</li> <li>2. Press <b>Dial</b>.</li> </ol>
Delete a Fast Dial code	<ol style="list-style-type: none"> <li>1. Search for a Fast Dial code.</li> <li>2. Highlight the listing you want and press <b>Remove</b>.</li> <li>3. Press <b>Remove</b> again.</li> </ol>
Log out of Personal Directory	<ol style="list-style-type: none"> <li>1. Press , and choose <b>Directories &gt; Personal Directory</b> (exact name can vary).</li> <li>2. Choose <b>Logout</b>.</li> <li>3. Press <b>OK</b>.</li> </ol>

## Tips




- Your system administrator can provide you the user ID and PIN that you need to log in to Personal Directory.
- Personal Directory automatically logs you out after a certain amount of time. This time limit can vary. Ask your system administrator for more information.
- Use the numbers on your keypad to enter characters on your phone screen. Use the Navigation button on your phone to move between input fields.
- Your phone might be set up for international call logging, which is indicated by a “+” symbol on the call logs, redial, or call directory entries. See your system administrator for more information.

# Accessing Voice Messages

To access voice messages, press , and select **Messages**.



**Note** Your company determines the voice message service that your phone system uses. For the most accurate and detailed information, refer to the documentation that came with your voice message service.

If you want to...	Then...
Set up and personalize your voice message service	Do one of the following: <ul style="list-style-type: none"> <li>• Press <b>Msgs</b> and follow the voice instructions.</li> <li>• Press , select <b>Messages</b>, and follow the voice instructions.</li> </ul>
Check for a new voice message	Look for: <ul style="list-style-type: none"> <li>• A steady red light on your handset. (This indicator can vary. See <a href="#">Customizing Rings and Message Indicators, page 45.</a>)</li> <li>• A flashing message waiting icon  on your phone screen.</li> </ul> Listen for: <ul style="list-style-type: none"> <li>• A stutter tone from your handset, headset, or speakerphone when you place a call.</li> </ul>
Listen to your voice messages or access the voice messages menu	Do one of the following: <ul style="list-style-type: none"> <li>• Press <b>Msgs</b> and follow the voice instructions.</li> <li>• Press , select <b>Messages</b>, and follow the voice instructions.</li> </ul>
Send a call to a voice message system	Press <b>Divert</b> . For more information, see <a href="#">Sending a Call to a Voice Message System, page 21.</a>

# Using the Cisco Unified CM User Options Web Pages

---

Your Cisco Unified IP Phone is a network device that can share information with other network devices in your company, including your personal computer. You can use your computer to log in to your User Options web pages, where you can control features, settings, and services for your Cisco Unified IP Phone. For example, you can set up speed-dial numbers from your User Options web pages.

## Accessing Your User Options Web Pages

This section describes how to log in and select a phone device.

If you want to...	Then do this...
Log in to your User Options web pages	<ol style="list-style-type: none"><li data-bbox="319 643 1167 699">1. Obtain a User Options URL, user ID, and default password from your system administrator.</li><li data-bbox="319 711 1130 743">2. Open a web browser on your computer, enter the URL, and log on.</li><li data-bbox="319 755 1159 787">3. If prompted to accept security settings, click <b>Yes</b> or <b>Install Certificate</b>.</li></ol> <p data-bbox="361 797 1204 886">The Cisco Unified Communications Manager User Options main web page displays. From this page you can select <b>User Options</b> to access User Settings, Directory features, a Personal Address Book, and Fast Dials.</p> <p data-bbox="361 898 1089 930">Or, to access phone-specific options, select a device (see below).</p>
Select a device after logging in	<ol style="list-style-type: none"><li data-bbox="319 943 1204 1040">1. After you have logged in to your User Options pages, choose <b>User Options &gt; Device</b>. The Device Configuration page displays.</li><li data-bbox="319 1052 1204 1149">2. If you have multiple devices assigned to you, choose the appropriate device (phone model, Extension Mobility profile, or Remote Destination profile) from the Name drop-down menu.</li></ol> <p data-bbox="319 1159 1180 1216"><b>Note</b> Toolbar buttons located at the top of the Device Configuration page are specific to the selected device type.</p>
Select a configuration option after logging in	<ol style="list-style-type: none"><li data-bbox="319 1227 1180 1317">1. After you have logged in to your User Options web pages, choose <b>User Options</b> to access User Settings, Directory, Personal Address Book, Fast Dials, and Mobility Settings.</li><li data-bbox="319 1328 1204 1385">2. To return to the Device Configuration page from another page, choose <b>User Options &gt; Device</b>.</li></ol>

## Configuring Features and Services on the Web

The topics in this section describe how to configure features and services from your User Options web pages after logging in. See [Accessing Your User Options Web Pages](#), page 54.

### Using Personal Directory on the Web

The Personal Directory feature set that you can access on your computer consists of:

- A Personal Address Book (PAB)
- Fast Dials
- Cisco Unified Communications Manager Address Book Synchronizer



**Note** You can also access PAB and Fast Dials from your phone. See [Using Personal Directory on Your Phone](#), page 50.

### Using Your Personal Address Book on the Web

This section describes how to use your PAB from the User Options web pages.

If you want to...	Then do this after you log in...
Add a new PAB entry	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Personal Address Book</b>.</li> <li>2. Choose <b>Add New</b>.</li> <li>3. Enter information for the entry.</li> <li>4. Click <b>Save</b>.</li> </ol>
Search for a PAB entry	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Personal Address Book</b>.</li> <li>2. Specify search information and click <b>Find</b>.</li> </ol>
Edit a PAB entry	<ol style="list-style-type: none"> <li>1. Search for a PAB entry.</li> <li>2. Click a name or nickname.</li> <li>3. Edit the entry as needed and click <b>Save</b>.</li> </ol>

If you want to...	Then do this after you log in...
Delete a PAB entry	<ol style="list-style-type: none"> <li>1. Search for a PAB entry.</li> <li>2. Select one or more entries.</li> <li>3. Click <b>Delete Selected</b>.</li> </ol>
Assign a line button for PAB	<p><b>Note</b> Before you can assign a line button for PAB, your system administrator must configure the phone to display services. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Click <b>Service URL</b>.</li> <li>3. Choose the Personal Address Book service from the Button drop-down list box.</li> <li>4. Enter a phone label for the button.</li> <li>5. Click <b>Save</b>.</li> <li>6. Click <b>Reset</b> and then click <b>Restart</b> to refresh the phone configuration.</li> </ol> <p>You can now press the line button to access PAB codes.</p>

## Configuring Fast Dials on the Web

This section describes how to assign Fast Dials from your User Options web pages.

If you want to...	Then do this after you log in...
Assign a Fast Dial code to a PAB entry	<ol style="list-style-type: none"> <li>1. Create a PAB entry. See <a href="#">Using Your Personal Address Book on the Web, page 55</a>.</li> <li>2. Choose <b>User Options &gt; Fast Dials</b>.</li> <li>3. Click <b>Add New</b>.</li> <li>4. Use the Search Options area to find the appropriate PAB entry.</li> <li>5. Click a phone number in the Search Results area.</li> <li>6. Change the Fast Dial code, if desired.</li> <li>7. Click <b>Save</b>.</li> </ol>
Assign a Fast Dial code to a phone number (without using a PAB entry)	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Fast Dials</b>.</li> <li>2. Click <b>Add New</b>.</li> <li>3. Change the Fast Dial code, if desired.</li> <li>4. Enter a phone number.</li> <li>5. Click <b>Save</b>.</li> </ol>



If you want to...	Then do this after you log in...
Search for a Fast Dial entry	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Fast Dials</b>.</li> <li>2. Specify search information and click <b>Find</b>.</li> </ol>
Edit a Fast Dial phone number	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Fast Dials</b>.</li> <li>2. Search for the Fast Dial entry that you want to edit.</li> <li>3. Click on a component of the entry.</li> <li>4. Change the phone number.</li> <li>5. Click <b>Save</b>.</li> </ol>
Delete a Fast Dial entry	<ol style="list-style-type: none"> <li>1. Search for a Fast Dial.</li> <li>2. Select one or more entries.</li> <li>3. Click <b>Delete Selected</b>.</li> </ol>
Assign a line button for Fast Dial	<p><b>Note</b> Before you can assign a line button for Fast Dial, your system administrator must configure the phone to display services. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Click <b>Service URL</b>.</li> <li>3. Choose the Fast Dial service from the Button drop-down list box.</li> <li>4. Enter a phone label for the button.</li> <li>5. Click <b>Save</b>.</li> <li>6. Click <b>Reset</b> and then click <b>Restart</b> to refresh the phone configuration.</li> </ol> <p>You can now press the line button to access Fast Dial codes.</p>

### Tips

- You can create up to 500 Fast Dial and PAB entries.
- You can create a new Fast Dial entry without using a PAB entry. Such Fast Dial entries are labeled “raw” in the User Options pages and do not display a configurable text label.

## Using the Address Book Synchronization Tool

You can use the Address Book Synchronization Tool (TABSynch) to synchronize your existing Microsoft Windows Address Book (if applicable) with your PAB. Entries from your Microsoft Windows Address Book will then be accessible on your Cisco Unified IP Phone and User Options web pages. Your system administrator can give you access to TABSynch and provide detailed instructions.

# Setting Up Speed Dials on the Web

Depending on configuration, your phone can support several speed-dial features:

- Speed-dial numbers
- Abbreviated Dialing
- Fast Dials




**Note** For help using speed dial features, see [Speed Dialing, page 28](#).

If you want to...	Then do this after you log in...
Set up speed-dial numbers	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Device</b>.</li><li>2. Choose a phone from the Name drop-down menu.</li><li>3. Click <b>Speed Dials</b>.</li><li>4. Enter a number and label for a speed-dial number on your phone.</li><li>5. Click <b>Save</b>.</li></ol> <p><b>Note</b> Your phone uses the ASCII Label field.</p>
Set up Abbreviated dialing	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Device</b>.</li><li>2. Choose a phone from the Name drop-down menu.</li><li>3. Click <b>Speed Dials</b>.</li><li>4. Enter a number and label for an Abbreviated Dialing code.</li><li>5. Click <b>Save</b>.</li></ol>
Set up Fast Dials	See <a href="#">Configuring Fast Dials on the Web, page 56</a> . You can also set up Fast Dials on your phone. See <a href="#">Using Personal Directory on Your Phone, page 50</a> .

## Setting Up Phone Services on the Web

Phone services can include special phone features, network data, and web-based information (such as stock quotes and movie listings). You must first subscribe to a phone service before accessing it on your phone.

If you want to...	Then do this after you log in and select a device...
Subscribe to a service	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Phone Services</b>.</li> <li>4. Click <b>Add New</b>.</li> <li>5. Choose a service from the drop-down list and click <b>Next</b>.</li> <li>6. Change the service label and/or enter additional service information, if available (optional).</li> <li>7. Click <b>Save</b>.</li> </ol>
Search for services	<ol style="list-style-type: none"> <li>1. Select a device.</li> <li>2. Click <b>Phone Services</b>.</li> <li>3. Click <b>Find</b>.</li> </ol>
Change or end services	<ol style="list-style-type: none"> <li>1. Search for services.</li> <li>2. Select one or more entries.</li> <li>3. Click <b>Delete Selected</b>.</li> </ol>
Change a service name	<ol style="list-style-type: none"> <li>1. Search for services.</li> <li>2. Click on the service name.</li> <li>3. Change the information and click <b>Save</b>.</li> </ol>
Access a service on your phone	<p>Use the Applications Menu and Applications Menu button  to select Services, Messages, and Directories.</p> <p><b>Note</b> The services available for your phone depend on the phone system configuration and the services you subscribed to. Ask your phone system administrator for more information.</p> <p><b>Note</b> If only one service is configured, the service opens by default. If more than one service is configured, select an option from the menu on the screen.</p>

## Controlling User Settings on the Web

User settings include your password, PIN, and language (locale) settings.

If you want to...	Then do this after you log in...
Change your password	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; User Settings</b>.</li><li>2. In the Browser Password area, enter information.</li><li>3. Click <b>Save</b>.</li></ol>
Change your PIN	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; User Settings</b>.</li><li>2. In the Phone PIN area, enter information.</li><li>3. Click <b>Save</b>.</li></ol>
Change the language (locale) for your User Options pages	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; User Settings</b>.</li><li>2. In the User Locale area, choose an item from the Locale drop-down list.</li><li>3. Click <b>Save</b>.</li></ol>
Change the language (locale) for your phone screen	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; User Settings</b>.</li><li>2. Choose an item from the User Locale drop-down list.</li><li>3. Click <b>Save</b>.</li></ol>

### Tip

Your PIN and password allow you to access different features and services. For example, use your PIN to log in to Cisco Extension Mobility or Personal Directory on your phone. Use your password to log in to your User Options web pages and Cisco WebDialer on your personal computer. For more information, ask your system administrator.

## Controlling Line Settings on the Web

Line settings affect a specific phone line (directory number) on your phone. Line settings can include call-forwarding, voice message indicators, ring patterns, and line labels.

You can set up other line settings directly on your phone:

- Set up call forwarding for your primary phone line—see [Forwarding Calls to Another Number](#), page 22.
- Change rings, display, and other phone-model specific settings—see [Changing Phone Settings](#), page 45.

If you want to...	Then do this after you log in...
Set up call forwarding per line	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Line Settings</b>.</li> <li>4. In the Incoming Call Forwarding area, choose call forwarding settings for various conditions.</li> <li>5. Click <b>Save</b>.</li> </ol>
Change the voice message indicator setting per line	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Line Settings</b>.</li> <li>4. In the Message Waiting Lamp area, choose from various settings.</li> </ol> <p><b>Note</b> Typically, the default message waiting setting prompts your phone to display a steady red light from the handset light strip to indicate a new voice message.</p> <ol style="list-style-type: none"> <li>5. Click <b>Save</b>.</li> </ol>
Change the audible voice message indicator setting per line	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Line Settings</b>.</li> <li>4. In the Audible Message Waiting Indicator area, choose from various settings.</li> </ol> <p><b>Note</b> Typically, the default message waiting setting prompts your phone to display a steady red light from the handset light strip to indicate a new voice message.</p> <ol style="list-style-type: none"> <li>5. Click <b>Save</b>.</li> </ol>
Change or create a line text label that appears on your phone screen	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Line Settings</b>.</li> <li>4. In the Line Text Label area, enter a text label.</li> <li>5. Click <b>Save</b>.</li> </ol> <p><b>Note</b> Your phone uses the ASCII Label field if the phone does not support double-byte character sets.</p>

## Setting Up Phones and Access Lists for Mobile Connect

When using Cisco Mobile Connect, you must add your mobile and other phones that you want to use to make and receive calls using the same directory numbers as your desk phone. These phones are called *remote destinations*. You can also define access lists to restrict or allow calls from certain numbers to be sent to your mobile phone.

If you want to...	Then do this after you log in...
Create an access list	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Mobility Settings &gt; Access Lists</b>.</li><li>2. Click <b>Add New</b>.</li><li>3. Enter a name to identify the access list and a description (optional).</li><li>4. Choose whether the access list will allow or block specified calls.</li><li>5. Click <b>Save</b>.</li><li>6. Click <b>Add Member</b> to add phone numbers or filters to the list.</li><li>7. Select an option from the Filter Mask drop-down list box. You can filter a directory number, calls with restricted caller ID (Not Available), or calls with anonymous caller ID (Private).</li><li>8. If you select a directory number from the Filter Mask drop-down list box, enter a phone number or filter in the DN Mask field. You can use the following wild cards to define a filter:<ul style="list-style-type: none"><li>- <b>X</b> (upper or lower case)—Matches a single digit. For example, 408555123X matches any number between 4085551230 and 4085551239.</li><li>- <b>!</b>—Matches any number of digits. For example, 408! matches any number starts with 408.</li><li>- <b>#</b>—Used as a single digit for exact match.</li></ul></li><li>9. To add this member to the access list, click <b>Save</b>.</li><li>10. To save the access list, click <b>Save</b>.</li></ol>


If you want to...	Then do this after you log in...
Add a new remote destination	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Mobility Settings &gt; Remote Destinations</b>.</li> <li>2. Click <b>Add New</b>.</li> <li>3. Enter the following information: <ul style="list-style-type: none"> <li>– Name—Enter a name for the mobile (or other) phone.</li> <li>– Destination Number—Enter your mobile phone number.</li> </ul> </li> <li>4. Select your remote destination profile from the drop-down list box. Your remote destination profile contains the settings that apply to remote destinations that you create.</li> <li>5. Select the <b>Mobile Phone</b> check box to allow your remote destination to accept a call sent from your desktop phone.</li> <li>6. Select the <b>Enable Mobile Connect</b> check box to allow your remote destination to ring simultaneously with your desktop phone.</li> <li>7. Choose one of the following options in the Ring Schedule area: <ul style="list-style-type: none"> <li>– <b>All the time</b>—Choose this option if you do not want to impose day and time restrictions on ringing the remote destination.</li> <li>– <b>As specified below</b>—Choose this option and select from the following items to set up a ring schedule based on day and time: <ul style="list-style-type: none"> <li>• Select a check box for each day of the week you want to allow calls to ring the remote destination.</li> <li>• For each day, select <b>All Day</b> or select the beginning and ending times from the drop-down lists.</li> <li>• Select the time zone from the drop-down list box.</li> </ul> </li> </ul> </li> <li>8. Choose one of the following ringing options: <ul style="list-style-type: none"> <li>– Always ring this destination.</li> <li>– Ring this destination only if the caller is in the allowed access list that you select.</li> <li>– Do not ring this destination if the caller is in the blocked access list that you select.</li> </ul> </li> </ol> <p><b>Note</b> The ring schedule drop-down list boxes include only the access lists that you have created.</p> <ol style="list-style-type: none"> <li>9. Click <b>Save</b>.</li> </ol>

## Using Cisco WebDialer

Cisco WebDialer allows you to make calls on your Cisco Unified IP Phone to directory contacts by clicking on items in a web browser. Your system administrator must configure this feature for you.

If you want to...	Then...
Use WebDialer with your User Options directory	<ol style="list-style-type: none"><li data-bbox="344 371 1210 427">1. Log in to your User Options web pages. See <a href="#">Accessing Your User Options Web Pages, page 54</a>.</li><li data-bbox="344 440 1083 467">2. Choose <b>User Options &gt; Directory</b> and search for a coworker.</li><li data-bbox="344 480 841 508">3. Click the number that you want to dial.</li><li data-bbox="344 521 1205 576">4. If this is your first time using WebDialer, set up preferences on the Make Call page.</li><li data-bbox="344 589 1190 693">5. Click <b>Dial</b>. (See the last row in this table to learn how to suppress this page in the future, if desired.) The call is now placed on your phone.</li><li data-bbox="344 706 1042 734">6. To end a call, click <b>Hangup</b> or hang up from your phone.</li></ol>
Use WebDialer with another online corporate directory (not your User Options directory)	<ol style="list-style-type: none"><li data-bbox="344 751 1137 807">1. Log in to a WebDialer-enabled corporate directory and search for coworkers.</li><li data-bbox="344 820 841 847">2. Click the number that you want to dial.</li><li data-bbox="344 860 969 888">3. When prompted, enter your user ID and password.</li><li data-bbox="344 901 1205 956">4. If this is your first time using WebDialer, set up preferences on the Make Call page.</li><li data-bbox="344 969 1190 1073">5. Click <b>Dial</b>. (See the last row in this table to learn how to suppress this page in the future, if desired.) The call is now placed on your phone.</li><li data-bbox="344 1086 1042 1114">6. To end a call, click <b>Hangup</b> or hang up from your phone.</li></ol>



If you want to...	Then...
Log out of WebDialer	Click the logout icon in the Make Call or Hang Up page.
Set up, view, or change WebDialer preferences	<p data-bbox="387 235 700 263">Access the Make Call page.</p> <p data-bbox="387 277 1251 334">The Make Call page appears the first time that you use WebDialer (after you click the number that you want to dial).</p> <p data-bbox="387 349 982 376">The Make Call page contains the following options:</p> <ul data-bbox="400 391 1251 699" style="list-style-type: none"> <li data-bbox="400 391 1184 448">• Preferred language—Determines the language used for WebDialer settings and prompts.</li> <li data-bbox="400 462 1251 699">• Use preferred device—Identifies the Cisco Unified IP Phone (Calling device) and directory number (Calling device) (line) that you will use to place WebDialer calls. If you have one phone with a single line, the appropriate phone and line are automatically selected. Otherwise, choose a phone and/or line. If you have more than one phone, it will be specified by device type and MAC address. (To display the MAC address on your phone, choose  &gt; Settings &gt; Network Configuration &gt; MAC address.)</li> </ul> <p data-bbox="387 714 1251 771"><b>Note</b> If you have an Extension Mobility profile, you can select your Extension Mobility logged-in device from the Calling device menu.</p> <ul data-bbox="400 802 1251 959" style="list-style-type: none"> <li data-bbox="400 802 1251 891">• Do not display call confirmation—If selected, prompts WebDialer to suppress the Make Call page. This page appears by default after you click a phone number in a WebDialer-enabled online directory.</li> <li data-bbox="400 906 1157 959">• Disable Auto Close—If selected, the call window does not close automatically after fifteen seconds.</li> </ul>

# Understanding Additional Configuration Options

Your system administrator can configure your phone to use specific button and softkey templates along with special services and features, if appropriate. This table provides an overview of some configuration options that you might want to discuss with your phone system administrator based on your calling needs or work environment.



**Note** You can locate Phone Guides and other documents listed in this table on the web:  
[http://www.cisco.com/en/US/products/hw/phones/ps379/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/hw/phones/ps379/tsd_products_support_series_home.html)

If you...	Then...	For more information...
Need to handle more calls on your phone line	Ask your system administrator to configure your line to support more calls.	Talk to your system administrator or phone support team.
Work with (or work as) an administrative assistant	Consider using a shared line.	See <a href="#">Using a Shared Line</a> , page 32.
Want to use one extension for several phones	Request a shared line. This allows you to use one extension for your desk phone and lab phone, for example.	See <a href="#">Using a Shared Line</a> , page 32.
Share phones or office space with coworkers	Consider using: <ul style="list-style-type: none"><li>• Call Park to store and retrieve calls without using the transfer feature.</li><li>• Call Pickup to answer calls ringing on another phone.</li><li>• A shared line to view or join co-workers' calls.</li><li>• Cisco Extension Mobility to apply your phone number and user profile to a shared Cisco Unified IP Phone.</li></ul>	Ask your system administrator about these features and see: <ul style="list-style-type: none"><li>• <a href="#">Advanced Call Handling</a>, page 28.</li><li>• <a href="#">Using a Shared Line</a>, page 32.</li><li>• <a href="#">Using Cisco Extension Mobility</a>, page 37.</li></ul>
Want to temporarily apply your phone number and settings to a shared Cisco Unified IP Phone	Ask your system administrator about the Cisco Extension Mobility service.	See <a href="#">Using Cisco Extension Mobility</a> , page 37.



# Troubleshooting Your Phone

---

This section provides troubleshooting information for your Cisco Unified IP Phone.





## General Troubleshooting

This section provides information to help you troubleshoot general problems with your phone. For more information, see your system administrator.

Symptom	Explanation
You cannot hear a dial tone or complete a call	One or more of the following factors might apply: <ul style="list-style-type: none"><li>• You must log into the Extension Mobility service.</li><li>• You must enter a client matter code (CMC) or forced authorization code (FAC) after dialing a number. (SCCP phones only.)</li><li>• Your phone has time-of-day restrictions that prevent you from using some features during certain hours of the day.</li></ul>
The softkey that you want to use does not appear	One or more of the following factors might apply: <ul style="list-style-type: none"><li>• You must press <b>more</b> to reveal additional softkeys.</li><li>• You must change the line state (for example, go off-hook or have a connected call).</li><li>• Your phone is not configured to support the feature associated with that softkey.</li></ul>
<b>Barge</b> fails and results in a fast busy tone	You cannot barge an encrypted call if the phone you are using is not configured for encryption. When your barge attempt fails for this reason, your phone plays a fast busy tone.
You are disconnected from a call that you joined using <b>Barge</b>	You will be disconnected from a call that you have joined using <b>Barge</b> if the call is put on hold, transferred, or turned into a conference call.
<b>CallBack</b> fails	The other party might have call forwarding enabled.
The phone shows an error message when you attempt to set up Call Forward All	Your phone may reject your attempt to set up Call Forward All directly on the phone if the target number that you enter would create a Call Forward All loop or would exceed the maximum number of links permitted in a Call Forward All chain (also known as a maximum hop count). Ask your system administrator for details.

## Viewing Phone Administration Data

Your system administrator might ask you to access administration data on your phone for troubleshooting purposes.

<b>If you are asked to...</b>	<b>Then...</b>
Access network configuration data	Press  and choose <b>Settings &gt; Network Configuration</b> and select the network configuration item that you want to view.
Access status data	Press  and choose <b>Settings &gt; Status</b> and select the status item that you want to view.
Access phone model information	Press  and choose <b>Settings &gt; Model Information</b> .
Access phone call and voice quality information	Press  and choose <b>Settings &gt; Status &gt; Call Statistics</b> .

## Using the Quality Reporting Tool

Your system administrator may temporarily configure your phone with the Quality Reporting Tool (QRT) to troubleshoot performance problems. You can press **QRT** to submit information to your system administrator. Depending on configuration, use the QRT to:

- Immediately report an audio problem on a current call
- Select a general problem from a list of categories and choose reason codes

# Cisco One-Year Limited Hardware Warranty Terms

---

There are special terms applicable to your hardware warranty and various services that you can use during the warranty period. Your formal Warranty Statement, including the warranties and license agreements applicable to Cisco software, is available on Cisco.com at the following URL:

[http://www.cisco.com/en/US/docs/general/warranty/English/1Y1DEN\\_\\_.html](http://www.cisco.com/en/US/docs/general/warranty/English/1Y1DEN__.html)

# Index

---

## A

Abbreviated Dialing [28](#)  
Abbreviated Dialing (Off-hook) [29](#)  
Address Book Synchronization Tool [57](#)  
answering calls [17](#)  
Applications Menu button [10](#)  
Applications menus, using [12](#)  
ASCII label field support [58](#)  
authenticated calls [34](#)  
Auto Dial [14](#)  
AutoAnswer [17](#)

## B

barge  
    and privacy [34](#)  
    and shared lines [32](#)  
    using [33](#)  
buttons, identifying [9](#)

## C

call forwarding [22](#)  
    configuring on phone [22](#)  
call logs  
    dialing from [14](#)  
    erasing [47](#)

    viewing and dialing from [47](#)  
call park [17, 31](#)  
call pickup [17, 30](#)  
call waiting [17](#)  
CallBack [15](#)  
caller ID [10](#)  
call-handling  
    advanced [28](#)  
    basic [14](#)  
calls  
    answering [17](#)  
    barging [33](#)  
    compared to lines [11](#)  
    conference features for [24](#)  
    ending [18](#)  
    forwarding [22](#)  
    handling multiple [17](#)  
    holding and resuming [18](#)  
    icons for [11](#)  
    maximum per line [11](#)  
    monitoring [42](#)  
    multiple parties on [24](#)  
    multiple, switching between [19](#)  
    parking [31](#)  
    placing [14](#)  
    prevent barging of [34](#)  
    prioritizing [36](#)

- redirecting while ringing **17, 30**
- reporting problems with **69**
- secure **34**
- storing and retrieving **31**
- transferring **20**
- viewing **10, 20**
- Cisco Extension Mobility **37**
- Cisco Extension Mobility feature, using **15**
- Cisco Unified IP Phone
  - connecting **5**
  - documentation for **2**
  - feature configuration for **12**
  - illustration **9**
  - protocol **13**
  - registering **7**
  - SCCP **13**
  - securing handset rest **7**
  - SIP **13**
  - troubleshooting **68**
  - web-based services for **59**
- Cisco WebDialer **64**
- Client Matter Code
  - See CMC
- CMC **68**
- conference
  - levels of security **34**
  - secure **34**
- conference calls
  - Meet-Me **26**
  - removing participants from **27**
  - security-level for **27**
  - types of **24**
  - viewing participants for **27**

- corporate directory
  - dialing from web page **15**
  - using on phone **49**

## **D**

- Details softkey, viewing multiparty calls with **48**
- device configuration page **54**
- dialing options
  - additional **15**
  - basic **14**
- dialing, options for **14**
- directory
  - corporate **49**
  - personal **50**
  - using from web page **64**
  - using on phone **47**
- DND **23**
- Do Not Disturb (DND) **23**
- documentation, accessing **2**

## **E**

- EM **37**
- encrypted calls **34**
- ending a call, options **18**
- Extension Mobility **37**
  - EM **38**
- external devices, using **3**

## **F**

- FAC **68**



- Fast Dials
  - configuring from web page [51](#)
  - using on phone [50](#)
- features, availability of [12](#)
- Forced Authorization Code
  - See FAC
- forwarding calls, options for [22](#)

## **G**

- group call pickup [30](#)
- Group Listen [42](#)

## **H**

- handset
  - light strip [10](#)
  - securing in cradle [7](#)
  - using [42, 43](#)
- hands-free listening [42](#)
- hanging up, options for [18](#)
- headset
  - performance [8](#)
  - performance, general [7](#)
- help, using [12](#)
- hold
  - and switching calls [19](#)
  - and transferring [20](#)
  - using [18](#)
- hold button illustration [10](#)
- hold reversion [18](#)
- hold reversion indicators [18](#)
- hunt groups

- description [32](#)
- log out of [32](#)

## **I**

- icons, for call states [11](#)
- installing, Cisco Unified IP Phone [5](#)
- international call logging [14, 49, 52](#)

## **K**

- keypad description [10](#)

## **L**

- language (locale) settings [60](#)
- lines
  - compared to calls [11](#)
  - description [11](#)
  - description of [11](#)
  - number of calls supported on [11, 66](#)
  - shared [32](#)
- logging out of hunt groups [32](#)

## **M**

- Malicious Call Identification
  - See MCID
- MCID [36](#)
- Meet-Me conferences [26](#)
- menus, using [12](#)
- messages
  - indicator for [45](#)

- listening to [53](#)
- missed calls, records of [47](#)
- MLPP, using [36](#)
- mobile connect
  - access to remote destinations [40](#)
  - enabling [63](#)
  - transferring incoming mobile calls to remote destinations [39](#)
- monitoring a call [42](#)
- multiparty calls
  - identifying in call logs [48](#)
  - viewing details of [48](#)
- multiple calls, handling [17, 20](#)

## **N**

- navigation button illustration [10](#)

## **O**

- off-hook dialing [14](#)
- on-hook dialing [14](#)

## **P**

- PAB
  - dialing from [15](#)
  - using from web page [55](#)
  - using on phone [50](#)
- parking a call [17](#)
- password, changing [60](#)
- Personal Address Book
  - See PAB
- Personal Directory

- using from web page [55](#)
- using on phone [50](#)
- phone lines, description of [11](#)
- phone services
  - configuring [55](#)
  - See also User Options web pages
- PIN [37](#)
- PIN, changing [60](#)
- Place [15](#)
- placed calls, records of [47](#)
- placing a call [14](#)
- placing calls, options for [14](#)
- pre-dial [14](#)
- prioritizing calls [36](#)
- privacy
  - and shared lines [32](#)
  - using [34](#)

## **Q**

- QRT [69](#)
- Quality Reporting Tool [69](#)

## **R**

- received calls, records of [47](#)
- redial [14](#)
- remote destination
  - ring schedule [63](#)
  - turn off access [40](#)
- remote-in-use icon for shared lines [32](#)
- resuming held calls [18](#)
- reverting calls [18](#)

- ring schedule for remote destinations **63**
- ring tones, changing **45**
- ringer
  - customizing **45**
  - indicator for **10**
  - volume for **45**

## **S**

- safety warnings **2**
- SCCP (Skinny Call Control Protocol) **13**
- secure calls **34**
- secure conferences **27**
- security, for calls **34**
- services, subscribing to **59**
- Session Handoff **19**
- settings, customizing **45**
- shared lines
  - and remote-in-use icon **32**
  - description of **32**
  - with barge **33**
  - with privacy **34**
- signaling protocol **13**
- SIP (Session Initiation Protocol) **13**
- softkey buttons, description of **10**
- sound quality **8**
- speaker
  - answering calls with **17**
  - using **18**
- speaker, using **42**
- speed dial
  - configuring **28**
  - labels **58**

- subscriptions, for phone services **59**
- suspicious calls, tracing **36**
- switching between multiple calls **19**
- switching calls **19**

## **T**

- TABSynch **57**
- TAPS **7**
- Tool for Auto-Registered Phones Support **7**
- Transfer your incoming mobile active call to desk phone **39**
- transferring
  - options for **20**
- Transferring incoming mobile calls to remote destinations **39**
- troubleshooting
  - general **68**
  - QRT **69**

## **U**

- User Options web pages
  - accessing **54**
  - configuring features and services with **55**
  - subscribing to phone services with **59**

## **V**

- voice message indicator
  - description of **53**
- voice messages, accessing **53**
- volume
  - for handset, headset, or speaker **42, 43**

for phone ringer [45](#)  
volume button illustration [10](#)

## **W**

warnings, safety [2](#)  
web-based services  
    configuring [55](#)  
    See also User Options web pages  
WebDialer [64](#)





**Americas Headquarters**  
Cisco Systems, Inc.  
San Jose, CA

**Asia Pacific Headquarters**  
Cisco Systems (USA) Pte. Ltd.  
Singapore

**Europe Headquarters**  
Cisco Systems International BV  
Amsterdam, The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLynX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

© 2010 Cisco Systems, Inc. All rights reserved.